

PHILIPS

Vacuum cleaner
with bag

Performer

2000W

FC9150/09



No other vac gives a more hygienic clean

Very high suction power

No other vacuum cleaner gives a more hygienic clean. The Performer combines the highest suction power ever (425 W!) with an Ultra Clean Air HEPA filter and full-appliance HEPA seal, to offer thorough cleaning while keeping the air clean.

Superior cleaning

- 2000 Watt motor generating max. 400 Watt suction power

Traps dust and allergens inside

- Ultra Clean Air HEPA 13 filter, 99.95% filtration

Highly efficient anti-allergy system

- ECARF Seal of Quality for trusted results

Long lasting dust pickup


- s-bag in XXL 4 liter capacity for long-lasting performance

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Highlights

2000 Watt motor

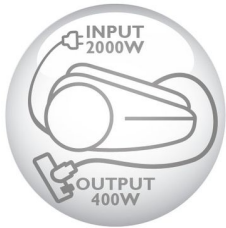

This powerful 2000 Watt motor generates max. 400 Watt suction power for excellent cleaning results.

s-bag in XXL 4 liter



This large dust bag capacity allows you to make optimal use of your dust bag, which means you have to change your dust bag less frequently.

Turbo Brush nozzle



The Turbo Brush nozzle allows deep cleaning of carpets and quick hair and fluff removal from carpets. The rotating brush actively removes small dust particles and hairs, resulting in a 25% better cleaning performance on carpets. The wheels of the nozzle prevent damage in case of use on hard-floors.

ECARF Seal of Quality Award



This ECARF certified vacuum cleaner guarantees with 99.95% certainty that almost all the air in the room will be filtered along with the normal vacuum action. This removes almost all allergens from carpets, furniture, and other spaces in your house.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Ultra Clean Air HEPA 13, 99.95% filtration



Ultra Clean Air HEPA 13 filter, 99.95% filtration

Specifications

Design

Color: Dark denim

Filtration

Dust bag type: s-bag

Exhaust filter: Ultra Clean Air HEPA 13 filter

Dust capacity: 4 L

HEPA Air Seal

Nozzles and accessories

Accessories included: Brush, Crevice tool, Small nozzle

Accessory storage: On handgrip

Additional nozzle: Turbo brush

Standard nozzle: TriActive nozzle

Performance

Airflow (max): 45 l/s

Input power (IEC): 1800 W

Input power (max): 2000 W

Noise level (Lc IEC): 76 dB

Suction power (max): 425 W

Vacuum (max): 33 kPa

Usability

Carrying handle: Top and front

Clean Comfort cassette

Tube coupling: Button

Dust full indicator

Power control: Electronic on appliance

Tube type: Metal lacquered 2-piece

telescopic tube

Wheel type: Rubber

Action radius: 12 m

Cord length: 9 m

Weight and dimensions

Weight of product: 6.3 kg

Dimensions of product (LxWxH): 500 x 320 x 280 mm

