

PHILIPS

Indoor Grill

Avance Collection

Smoke-less infrared heat technology

Minimizes unpleasant smoke and grease

Easy to set up, Easy to clean



HD6371/94



Delicious grilled food with virtually no smoke thanks to advanced infrared heat technology

Philips Indoor Smoke-less grill is a unique appliance that allows you to enjoy tasty, evenly browned grilled food all year round. The advanced infrared heat technology ensures up to 80% less smoke and minimal splattering.

Makes grilling indoors a comfortable experience

- Advanced infrared heat technology for up to 80% less smoke
- Easy set-up means you can start grilling within 1 minute
- Easy to clean detachable parts are also dishwasher-proof
- Keep your food warm with keep warm function

Delicious, evenly grilled food. Guaranteed.

- Constant heat for perfect browning without burning
- Powerful infrared heat sears the meat & preserves tenderness
- All sides evenly grilled thanks to special heat reflectors
- Non-stick ALU grid provides authentic BBQ grill marks

Variety of healthy grilled food

- Lean grilling- excess fat is collected on XL grease tray
- Free recipe book with inspiring grill recipes



Highlights

Smoke-less infrared technology



The advanced Infrared technology and the special reflectors guide the heat towards the grid achieving delicious, evenly grilled food, while leaving the grease tray cool enough to minimize unpleasant smoke and grease splattering. As fat and water content differ per food type, grilling some ingredients (beef and chicken) results in hardly any smoke, while with others (pork or lamb) there can be slightly more- yet much less than with current grills.

Juicy and tender grilled food

The powerful infrared heat sears the meat without burning it, while the inside remains tender and juicy.

Non-stick aluminum grid



The robust die-cast aluminium grid allows for a perfectly grilled food

Perfectly browned, evenly cooked

To get a great browned piece of meat you need to cook it at temperatures above 300 F. Burning can occur when meat comes in contact with 500 degrees F or more (or if you overcook it). Philips Smoke-less grill reaches temperature of 450 F that does not experience the occasional drops of temperature like in the

conventional grills. In addition, the ALU grid helps achieve authentic BBQ grill marks on food.

Special design of reflectors

When using conventional grills there are continuous temperature fluctuations that cause the grill to over shoot your set temperature and likely char your food. With the Philips Smoke-less indoor grill, there's no need to adjust the temperature. The grill quickly heats up to a constant 446° F degrees- which is the perfect temperature for searing meat- and maintains that temperature throughout the entire cooking process. With one perfect temperature you will be able to grill different types of food all at once and achieve tasty, juicy and evenly browned results with minimal effort.

Easy to clean




Grills and BBQs are hard to clean. However, thanks to the non-stick grid, the appliance takes less than a minute to be cleaned. Additionally, the detachable parts are dishwasher safe. Cleaning a grill has never been so easy.

Lean Grilling



Food is not cooked in its own grease and the fat is separated into the grease tray allowing for lean grilling.

Easy set-up

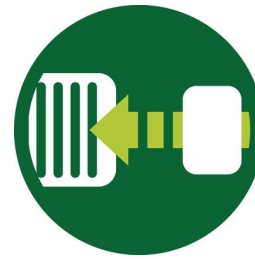

Simple to use, easy to install. The Philips Smoke-less Indoor grill consists of two parts: a grid and grease tray, which will take less than a minute to assemble. With minimal parts to set up, you will spend less time on assembly and more time on enjoying all the goodness of grilled food.

Free recipe book



Delicious recipes, handy tips and tricks- all included in the free recipe book.



IF DESIGN AWARD

IF award-winning products and projects, concepts and more, selected by the top names in design. Each year, iF International Forum Design GmbH organizes one of the world's most celebrated and valued design competitions: the iF DESIGN AWARD. Recognized as a symbol of design excellence around the world, the iF DESIGN AWARD welcomes over 5,000 submissions from 70 countries every year.

Specifications

General specifications

Product features: Cord storage, Dishwasher safe, Infrared Heat Technology, Non-slip feet, On/off switch

Technical specifications

Power: 1660 W
Voltage: 120 V

Weight and dimensions

Weight incl. packaging: 7,05 kg
Weight of product: 5.6 kg

Design

Color: Black

