

PHILIPS

Steam generator
iron

PerfectCare Aqua
Pro

Max 6.7-bar pressure

Up to 450 g steam boost

2.5-l water tank capacity

Ultra-light iron

GC9405



Super-powerful ironing with ultra-light iron

PerfectCare Aqua Pro comes with our ultra-light iron and extra-large 2.5-l water tank — ideal for long ironing sessions and perfect vertical steaming.

No temperature setting needed; no burning, guaranteed

- Go from ironing jeans to silk; no need to change temperature setting
- Safe to leave the hot soleplate on the ironing board
- Tested and approved by independent textile experts

Fast ironing with continuous powerful steam

- Powerful steam for ultimate crease removal
- Easy and efficient descaling system
- Philips' best gliding and most scratch-resistant soleplate
- Save energy with ECO mode

Ultimate ironing experience

- Enjoy powerful ironing with minimum noise
- Lightweight and comfortable to handle
- Extra-large water tank for longer continuous use
- Safe and secure carry lock
- Automatic switch-off for safety and energy saving



asimpleswitch.com

Highlights

2.5-l water tank




The water tank has an extra-large 2.5-l capacity, so you get the convenience of up to 3 hours of continuous use with no need to top up the tank. It's also transparent, so you can get a 360° view of the tank to easily see how much water you have left to continue creating steam efficiently. When you do need to refill, your steam generator iron has a large filling hole that allows you to easily fill the water tank under the tap, or alternatively with a jug or bottle at any time during ironing.

Easy De-calc



Regular descaling protects your iron and ensures you'll continue to get the very best steam performance. The exclusively designed and ideally positioned Easy De-Calc Plus function provides the ideal way to get rid of limescale and extend the lifespan of your steam generator iron. The iron will remind you with both light and sound when it's time to clean and descale. Then when your appliance is cold, simply remove the Easy De-Calc knob, collect the dirty water and scale into a cup and discard.

Energy saving

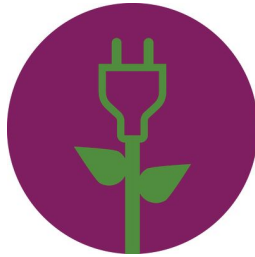

ECO mode allows you to save energy without compromising your ironing results. The ECO mode uses a reduced amount of steam, but still a sufficient amount to iron all your garments.

OptimalTEMP technology



With OptimalTEMP technology you'll no longer have to waste time changing temperature settings, waiting for the temperature to adjust or pre-sorting clothes. Iron all fabrics, from jeans to silk, with no burning guaranteed thanks to the perfect combination of temperature and continuous powerful steam.

Safe carry lock



Your steam generator iron includes a safe carry lock, which securely fastens your iron to its base without the risk of it slipping or someone touching the hot soleplate. It ensures safe and easy transportation around the house, to and from storage.

Safe rest



Innovative OptimalTEMP technology guarantees no burning on any ironable fabric. As well as the reassurance this provides whilst ironing, it also means you can leave the hot iron soleplate directly on your cotton ironing board without causing any damage. This helps to reduce any discomfort to your wrists, as you won't need to lift the iron to and from its base as often.

Safety auto off



The safety auto-off function automatically switches off your steam generator iron if it has not been used for a few minutes. This saves energy and gives you peace of mind about safety.



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas — Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Technology

For all ironable fabrics
No burn
No temperature setting needed
OptimalTEMP Technology
Silent steam technology
Cyclonic steam chamber
Smart Control Processor

Easy to use

Safe on all ironable fabrics: Even delicates like silk
Soleplate name: T-ionicGlide
Water tank capacity: 2500 ml
Power cord length: 1.8 m
Refill anytime during use
Safety auto off
Tap water suitable
Soleplate scratch resistance: 5 stars
Cord freedom (swivel): 360 degree cord freedom
Extra-large filling hole

Heat-up time: 2 min
Hose length: 1.7 m
Precision steam tip
Ready to use: Light indicator
Soleplate gliding performance: 5 stars

Scale management

Descaling and cleaning: Easy De-calc
Descaling reminder: Light, Yes

Storage

Carry lock: For transportation and safety
Cord storage: Velcro fix
Hose storage: Hose storage compartment

Size and weight

Product dimensions (W x H x D): 36.2 x 27 x 26.3 cm
Weight of iron: 0.8 kg
Weight of iron + base: 4.2 kg

Guarantee

2 year worldwide guarantee

Green efficiency

Product packaging: 100% recyclable
User manual: 100% recycled paper
Energy saving mode

Fast crease removal

Continuous steam: Up to 120 g/min
Power: Max 2100 W
Pressure: Max 6.7 bar
Ready to use: 2 min
Steam boost: Up to 450 g
Steam-on-demand
Variable steam levels
Vertical steam
Voltage: 220 - 240 V

