

# PHILIPS

Super-automatic  
espresso machine

2000 Series

3 Beverages

Classic Milk Frother

Black



HD8651/01



## Taste the aroma of your favorite coffee beans 100% ceramic grinders for long-lasting performance

Whatever blend of coffee you like, you can grind the beans fresh on the spot extracting maximum flavors thanks to the ceramic grinders that don't overheat the beans. And with the manual frother, just top your coffee with creamy milk foam.

### A variety of coffees customized to your taste

- Enjoy 3 coffees at your fingertips
- Delicious milk froth thanks to the classic milk frother
- Adjust the length and 5 grinder settings
- Adjust and store your personal user profile
- Enjoy 2 cups at the same time with Double Cup function

### Your fresh coffee experience

- 20,000 cups of finest coffee with durable ceramic grinders
- Coffee at the perfect temperature with our Thermoblock
- Always the right strength in cup, no matters which beans

### Enjoy your coffees every day with no hassle

- Enjoy a great coffee with Auto-Rinse & guided descaling
- Fits any kitchen thanks to the small size and frontal access
- Easy cleaning thanks to fully removable brew group

# Highlights

## 100% ceramic grinders



Our grinders are 100% pure ceramic: extremely hard and precise, so you can enjoy fresh aromatic coffee, for at least 20.000 cups.

## 3 aromatic coffees




Enjoy your favourite coffees for your special moments. Whether you crave for an espresso, a coffee or a milk based recipe, your fully-automatic espresso machine delivers a perfect in-cup result with no hassle and in no time!

## Classic milk frother



The Classic Milk Frother dispenses steam, allowing you to easily prepare silky smooth milk froth for your cappuccino. What's more? With only two parts, the Classic Milk Frother is also easy to clean.

## Customize your coffees

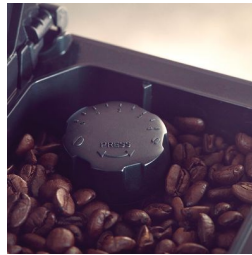

Adjust the length and 5 grinder settings

## Double Cup


Enjoy and share your favorite coffee thanks to the double cup function

## Gusto perfetto



Gusto Perfetto is self learning technology that tracks constantly the beans you use to prepare your drinks. If it detects a change in the type of beans used, it automatically adjust the dosing in the brew chamber to always ensure a consistent result in cup

## Thermoblock

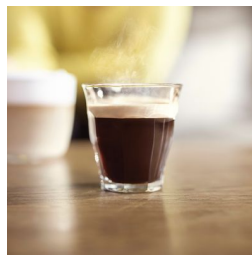


The Thermoblock ensures a hot coffee and cappuccino for your family always at the perfect temperature. The secret is in its light aluminum and stainless steel body, which can reach hot temperatures, fast.

## Removable brew group




The brew group is the heart of every fully automatic coffee machine, and should be cleaned regularly. The removable brew group allows you to clean it thoroughly just by rinsing it under the tap.

## Small size and frontal access

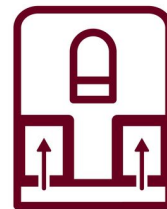

It doesn't matter how big your kitchen is: this machine fits even the smallest spaces, and it is extremely convenient as you can access the water and waste containers from the front. Designed for making your coffee enjoyment easier.

## User Profiles

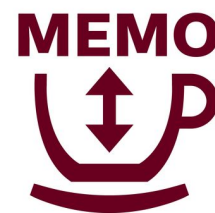

Store the length of any coffee beverage according to your personal taste. You will be able to drink espresso, coffee and all other beverages always as you prefer, at the touch of a button.

# Specifications

## Design

Color: Black

## Customization

Aroma Strength Settings: No

Coffee Length: Adjustable

Grinder Settings: 5

Pre Brew Aroma control: No

User Profiles: 1

## General specifications

Milk Solution: Classic Milk Frother

User Interface: LED Buttons

## Other features

Auto-Rinse & Guided descaling

Main Switch ON / OFF button

Removable brew group

Gusto perfetto

## Technical specifications

Capacity waste container: 8 servings

Capacity water tank: 1 L

Frequency: 50 Hz

Max. cup height: 95 mm

Voltage: 230 V

Color & Finishing: Black

Cord length: <100 cm

Filter compatibility: Brita Intenza

Waste container: Frontal access

Water tank: Frontal access

Weight of product: 7 kg

Product dimensions: 295 x 325 x 420 mm

Coffee bean capacity: 180 g

## Variety

Beverages: Espresso, Espresso Lungo, Hot water

Coffee Powder Option: No

Double Cup

Milk Double Cup: No

