

PHILIPS

Bagless vacuum cleaner

PowerPro Active

2000 W

EPA 10 filter

1.7 L

FC8670/61



High suction power with PowerCyclone 4 Quick and easy emptying

The new Philips PowerPro Active bagless vacuum cleaner delivers high cleaning performance, thanks to PowerCyclone technology and Multi Clean nozzle, engineered to maximize dust pick-up. The dust container is easy to empty, with no dust cloud.

Remarkable cleaning results

- 2000 W motor for strong suction power
- PowerCyclone 4 technology separates dust and air in one go
- New Multi Clean nozzle for thorough cleaning on all floors

Effortless cleaning

- Soft brush integrated into handle, always ready to use
- ActiveLock couplings to easily adjust to each cleaning task
- Reach all corners thanks to the extra long ergonomic grip
- Variable power setting

Clean air filter system

- EPA10 filter system with AirSeal for healthy air

Highlights

2000 Watt motor



2000 W motor generates strong suction power for excellent cleaning results.

PowerCyclone 4 Technology



PowerCyclone 4 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber to separate the dust from the air.

Multi Clean nozzle



The new Multi Clean nozzle delivers a thorough cleaning on all types of floors. The nozzle is designed to seal closely to the floor to ensure a good pick-up of even the fine dust.

Soft brush at your fingertips




A dusting brush attachment is built right into the handle so it's always ready to use for furniture, flat surfaces and upholstery.

ActiveLock couplings




The ActiveLock couplings allow you to easily connect and disconnect the different nozzles and accessories from the telescopic tube while cleaning.

Extra long ergonomic grip

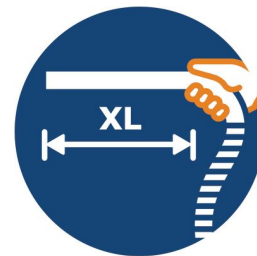

This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

Power control

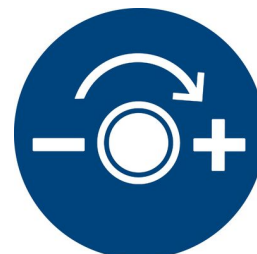

The variable power setting allows you to select the optimal level of suction for the different types of surfaces you vacuum.

EPA10 Clean air system



EPA10 filter and AirSeal capture the finest dust before the air is blown out for a dust-free environment and clean, healthy air.

Specifications

Performance

Airflow (max): 37 l/s
Input power (IEC): 1800 W
Input power (max): 2000 W
Sound power level: 80 dB
Suction power (max): 370 W
Vacuum (max): 33 kPa

Usability

Action radius: 9 m
Carrying handle: Top and front
Tube type: Metal 2-piece telescopic tube

Wheel type: Rubber
Tube coupling: ActiveLock
Power control: Electronic on appliance

Design

Color: Ink Black

Filtration

Dust capacity: 1.7 L
Exhaust filter: Microfilter
Motor filter: EPA 10 washable filter

Nozzles and accessories

Accessories included: Crevice tool, Integrated brush
Accessory storage: On tubeclip
Standard nozzle: Multi-purpose nozzle

Sustainability

Packaging: > 90% recycled materials
User manual: 100% recycled paper

Weight and dimensions

Dimensions of product (LxWxH): 473 x 304 x 301 mm
Weight of product: 6 kg

