

# PHILIPS

## Steam iron

### Azur

Steam 40g/min; 180g steam boost

SteamGlide soleplate

Safety Auto Off

2400 Watts

GC4855/22



## Designed for perfection

### Iron with powerful steam performance

This new Philips Azur iron comes with an optimal design and weight to maneuver the iron easily over the garment, even into the hard to reach areas. Together with its powerful steam performance it gives you all you need for perfect results.

#### **Easily removes creases**

- Continuous steam output up to 40 g/min
- 2400 W for quick heat up
- Steam boost up to 180 g

#### **Easy gliding on all fabrics**

- SteamGlide soleplate is Philips premium soleplate

#### **Safe ironing**


- Automatically turned off for safety and energy saving

#### **Designed for perfect results**

- Optimal design to manoeuvre the iron easily over the garment
- Lightweight to move the iron easily on and off the board
- Steam tip allows you to have steam in hard-to-reach areas
- Sideways opening filling door


# Highlights

## Steam tip

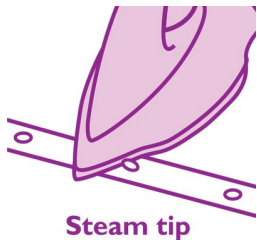

The unique steam tip of this Philips iron, combines a particularly pointed front of the soleplate with special elongated steam slots in the tip, to reach right into the smallest and most difficult areas for the best ironing results.

## Lightweight iron

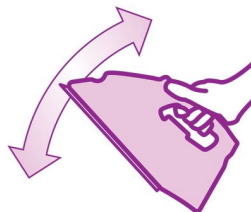

The iron has an optimal weight of 1.6kg making it easy to constantly place the iron on the board and back to its heelrest.

## Safety auto off

# Safety auto off

The safety auto off function automatically switches off the appliance if it has not been used for 5 minutes, to save energy.

## SteamGlide soleplate



SteamGlide soleplate is the best Philips soleplate for your steam iron. It has great scratch resistancy, glides excellent and is easy to clean.

# 2400W max

2400 W for quick heat up and powerful performance

## Up to 40 g/min of steam




Philips steam iron with continuous steam output of up to 40 g/min gives you the perfect amount of steam to efficiently remove all creases.

## Steam boost up to 180 g



The steam boost can be used for vertical steaming and tough creases.


## Easy to handle

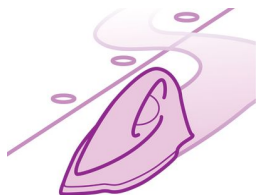

## Easy to handle

The Philips steam iron is designed to manoeuvre it easily over the garment and enabling you to reach easily even the hardest to reach areas.

## Easy filling

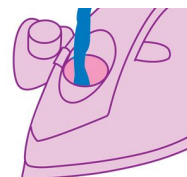

## Sideways opening

Sideways opening filling door

# Specifications

## Fast & powerful crease removal

Soleplate: SteamGlide

Continuous steam output: 40 g/min

Steam boost: 180 g

Vertical steaming

Variable steam settings

Spray

Steam tip

Power: 2400 W

## Comfortable ironing

Cord length: 2.5 m

## Easy to use

Water tank capacity: 350 ml

Drip stop

Safety auto off

Cord storage: Cord clip

Power cord length: 2.5 m

Fast and easy filling

## Calc management

Calc clean solution: Double active calc clean

## Technical specifications

Weight of iron: 1.6 kg

Voltage: 220 - 240 V

