

# PHILIPS

Cordless Stick  
vacuum cleaner

SpeedPro

180° suction nozzle

21.6V, up to 40 min

2-in-1: vacuum & handheld



FC6724/61



## Fast. Powerful reach, even in the toughest spots

The new SpeedPro cordless vacuum cleaner provides a fast clean, with powerful reach. It's equipped with the 180° suction nozzle for precise dirt pick-up, even in the toughest spots – close to walls, furniture and in the corners.

### Fast clean, with powerful reach

- Two speed settings to suit different floors and dirt types
- Captures up to 98% of dust and dirt in each stroke

### Uninterrupted, effective cleaning

- Up to 40 min of cleaning power, with 21.6V Li-Ion batteries
- Integrated handheld unit, crevice tool and brush
- Unique dust bucket design empties without dust clouds
- Fast reach everywhere, even under low furniture

### High air speed for long-lasting performance

- PowerBlade motor is engineered for high air speed
- PowerCyclone 7 maintains strong performance for longer
- Washable filter ensures high air speed for longer\*

# Highlights

## Up to 40 minutes runtime



High performance 21.6V lithium ion batteries provide up to 40 minutes in normal mode and 20 minutes in turbo mode, before you recharge.

## Integrated accessories



Accessories are simple to use with one click. The detachable handheld unit makes SpeedPro two devices in one. The brush attachment is integrated into the tube so it's always at hand to clean ceilings and shelves.

## PowerBlade motor




PowerBlade motor is engineered for high air speed, to enable powerful, precise pick-up at nozzle level.

## PowerCyclone 7



PowerCyclone 7 technology immediately separates dust from air, to maintain strong performance for longer.

## Washable filter

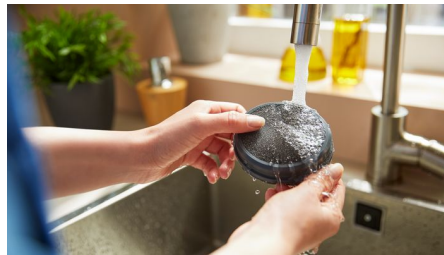


The filter system captures up to 99% of pollen and mold spores, returning clean air back to the motor ensuring high air speed and longer-lasting performance.

## Fast reach everywhere



SpeedPro is flexible and easy to maneuver. The dust bucket is on top, which allows for a lower angle and even goes fully flat on the floor to reach under low furniture.

## Hygienic emptying

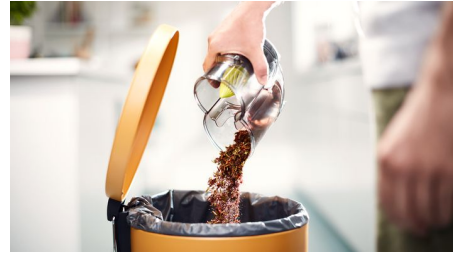

The vacuum cleaner's dust bucket is easily removed and emptied hygienically without causing any dust cloud.

## Two speed settings



Two speed settings to suit different floors and dirt types.

## 180° suction nozzle



180° suction nozzle is designed for precise and powerful pick-up of up to 98% of dust and dirt in each stroke, on all floor types, even in those hard to reach spots.

# Specifications

## Performance

**Battery type:** Li-Ion  
**Battery voltage:** 21.6 V  
**Charging time:** 5 hour(s)  
**Runtime:** 40 minute(s)  
**Runtime (turbo):** 20 minute(s)  
**Sound power level:** 80 dB  
**Airflow (max):** Up to 800 l/min

## Usability

**Carrying handle:** Top  
**Wheel type:** Rubber

## Design

**Design features:** 2-in-1  
**Color:** Dark Royal Blue

## Filtration

**Dust capacity:** 0.4 L  
**Motor filter:** Washable filter\*

## Nozzles and accessories

**Accessories included:** AC power adaptor, Crevice tool, Integrated brush, Wall-mount docking  
**Standard nozzle:** 180° suction nozzle

## Sustainability

**Packaging:** > 90% recycled materials

## Weight and dimensions

**Weight of product:** 2.48 kg

