



Philips PowerPro Aqua  
Cordless rechargeable  
vacuum cleaner

### 3-in-1

Vacuum, mop and handheld  
25.2 V  
Mini turbo brush

FC6409

## Vacuums and mops in one stroke

The new cordless (25.2V) PowerPro Aqua is a 3in1 powerful tool to deal with daily messes. A bagless vacuum cleaner includes a handheld for chair or corners, a mini turbo brush for soft surfaces and a mopping system to clean damp dirt.

### Always at hand and convenient for daily usage

- Bagless: one-step empty dust bucket, simple and hygienic
- Cordless cleaning: freedom to clean everywhere
- Powerful 25.2V Lithium Ion battery for up to 1 hour cleaning
- Instant click on/off mopping system for wet cleaning
- High maneuverability and light weight for easy handling
- Microfiber pads
- Mini turbo brush for cleaning soft surfaces

### Cleans everyday messes with vacuum and mop

- TriActive Turbo nozzle for powerful performance on carpets
- PowerCyclone technology for high vacuum cleaning performance
- New mopping system with optimal wetness on hard floors
- Handheld for vacuuming furniture and hard to reach corners
- 3 layer filter technology captures micro particles

# PHILIPS

# Highlights

## Bagless



With the new bagless PowerPro Aqua vacuum cleaner, you can dispose dust from the dust bucket without touching the dirt.

## Click on/off mopping system




With the magnet on both sides, the mopping system is easily clicked on and off to the nozzle.

## Mini turbo brush



Thanks to the mini turbo brush, you can now easily clean soft surfaces like sofas, cushions and mattresses. It is also ideal for removing animal hair

## Cordless operation

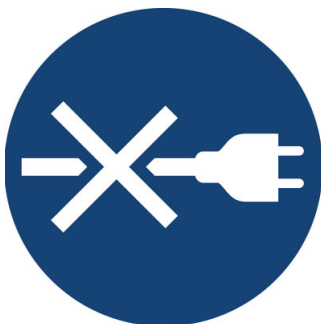

The rechargeable batteries for cordless operation gives you freedom to clean everywhere. Now the cable is not a barrier anymore and you can easily clean in different rooms with no hassle.

## Light and maneuverable



High maneuverability and light weight are ensured with the new PowerPro Aqua vacuum cleaner for easy handling.

## TriActive Turbo nozzle



The TriActive Turbo nozzle delivers powerful performance on hard floors and carpets. The motorized brush and the optimized airflow pick up all dirt and fluff in one go.

## 25.2V Lithium Ion battery



Cordless cleaning with powerful 25.2V Lithium Ion battery for up to 1 hour of runtime. You can charge anytime without needing to wait for an empty battery

## Microfiber pads

The new PowerPro Aqua includes two types of microfiber pads to mop different surfaces: 1) One universal microfiber pad for regular mopping, which is ideal for such surfaces like tiles. 2) One soft microfiber pad for cleaning more delicate surfaces, such as wooden surfaces. The microfiber pads can be washed by hand\*

## PowerCyclone technology



PowerCyclone fan roates with speeds up to 300 km/h to create high G-force in the PowerCyclone which effectively seperates dust from air, hence continuously high cleaning performance.

# Specifications

## Performance

- Battery type: Li-Ion
- Battery voltage: 25.2 V
- Charging time: 5 hour(s)
- Mopping element: Unique mopping system
- Runtime: up to 60 minute(s)
- Surface coverage per tank: 50 m<sup>2</sup>
- Sound power level: 83 dB

## Usability

- Clean water tank capacity (max): 0.2 L
- Detergents that can be used: clear detergent or just water

## Design

- Design features: On-off
- Color: Petrol blue metallic

## Filtration

- Dust capacity: 0.6 L
- Exhaust filter: Foam filter
- Filter system: 3 layer German technology

## Nozzles and accessories

- Accessories included: 2-in-1 brush, AC power adaptor, Crevice tool, 1 pad holder, 2 microfiber pads
- Standard nozzle: TriActive Turbo Nozzle

## Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

## Weight and dimensions

- Weight of product: 4.7 kg



Issue date 2020-07-05

Version: 2.0.1

12 NC: 0000 041 02775  
EAN: 87 10895 68827 7

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Recommended to replace every 3-6 months depending on usage frequency. 2 microfiber pads are included in pack, you can check [www.philips.com](http://www.philips.com) to find where to buy the microfiber pads. We cannot guarantee optimal cleaning results when microfiber pads from other brands are used.