

# PHILIPS

Super-automatic  
espresso machine

2000 Series

1 Beverage

Black



HD8650/01



## Taste the flavors of your favorite coffee beans 100% ceramic grinders for long-lasting performance

Whatever blend of coffee you like, you can grind the beans fresh on the spot extracting maximum flavors thanks to the ceramic grinders that don't overheat the beans.

### A variety of coffees customized to your taste

- Enjoy 1 beverage at your fingertips
- Adjust the length and 5 grinder settings
- Adjust and store your personal user profile
- Enjoy 2 cups at the same time with Double Cup function

### Your fresh coffee experience

- 20,000 cups of finest coffee with durable ceramic grinders
- Always the right strength in cup, no matters which beans
- Coffee at the perfect temperature with our Thermoblock

### Enjoy your coffees every day with no hassle

- Easy cleaning thanks to fully removable brew group
- Fits any kitchen thanks to the small size and frontal access
- Enjoy a great coffee with Auto-Rinse & guided descaling

# Highlights

## 1 beverages


Enjoy a great espresso or coffee from fresh beans

## 100% ceramic grinders



Our grinders are 100% pure ceramic: extremely hard and precise, so you can enjoy fresh aromatic coffee, for at least 20.000 cups.

## Customize your coffees

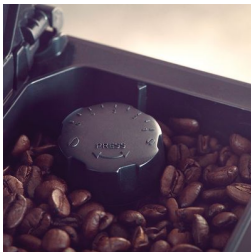


Adjust the length and 5 grinder settings

## Double Cup

Enjoy and share your favorite coffee thanks to the double cup function

## Gusto perfetto



Gusto Perretto is self learning technology that tracks constantly the beans you use to prepare your drinks. If it detects a change in the type of

beans used, it automatically adjust the dosing in the brew chamber to always ensure a consistent result in cup

## Thermoblock




The Thermoblock ensures a hot coffee and cappuccino for your family always at the perfect temperature. The secret is in its light aluminum and stainless steel body, which can reach hot temperatures, fast.

## Removable brew group



The brew group is the heart of every fully automatic coffee machine, and should be cleaned regularly. The removable brew group allows you to clean it thoroughly just by rinsing it under the tap.


## Small size and frontal access

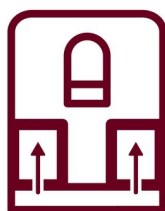

It doesn't matter how big your kitchen is: this machine fits even the smallest spaces, and it is extremely convenient as you can access the


water and waste containers from the front. Designed for making your coffee enjoyment easier.

## User Profiles

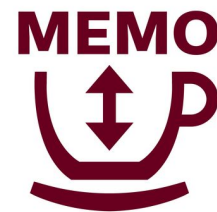

Store the length of any coffee beverage according to your personal taste. You will be able to drink espresso, coffee and all other beverages always as you prefer, at the touch of a button.

## Auto-Rinse & Guided descaling

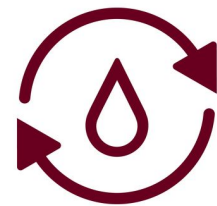

This espresso machine automatically cleans its coffee circuit with water upon starting up or switching off of the machine, this delivers a great, fresh taste with each cup of coffee. Regular descaling prolongs your espresso machine's life. This machine will prompt when descaling is needed. It will guide you with on-screen messages what you have to do and when.

# Specifications

## Design

Color: Black

## Technical specifications

Capacity waste container: 8 servings

Frequency: 50 Hz

Max. cup height: 95 mm

Voltage: 230 V

Color & Finishing: Red

Cord length: <100 cm

Filter compatibility: Brita Intenza

Waste container: Frontal access

Water tank: Frontal access

Weight of product: 7 kg

Product dimensions: 295 x 325 x 420 mm

Coffee bean capacity: 180 g

Capacity water tank: 1 L

## Customization

Aroma Strength Settings: No

Coffee Length: Adjustable

Grinder Settings: 5

Pre Brew Aroma control: No

User Profiles: 1

## Variety

Beverages: Espresso

Coffee Powder Option: No

Double Cup

Milk Double Cup: No

## Other features

Auto-Rinse & Guided descaling

Main Switch ON / OFF button

Quick Heat Boiler

Removable brew group

Gusto perfetto

## General specifications

User Interface: LED Buttons

