

Philips IntelliCare
Pressurised steam
generator

Auto Calc-Clean
ECO



GC9140

Powerful and hassle-free ironing

Iron with Auto Calc-Clean function

This powerful and fast Philips ironing system GC9140/02 takes away hassles with the unique Auto Calc-Clean function. Removing scale from the iron is something you no longer have to do, giving you a superb ironing experience, hassle-free

Hassle-free scale removal

- Removes scale from your system automatically

Fast and powerful ironing

- Up to 5 bar pressure
- Continuous steam up to 120 g/min
- Steam boost up to 200 g

Comfortable ironing

- Ergonomic and lightweight 1.2 kg iron
- SteamGlide soleplate is Philips premium soleplate

Easy to use

- Easy one touch cord storage — just press the button

Reduce energy consumption

- Save 20% energy and 40% water consumption

PHILIPS

Highlights

Auto Calc-Clean function

The Auto Calc-Clean function automatically cleans your ironing system of scale. A two-minute scale removal cycle is activated automatically when it is time to clean your system. All you have to do is empty the detachable rinse tank. It keeps your system as new and powerful as the day you bought it.

Up to 5 bar pressure

5 bar

The more steam, the faster the ironing. Consistent powerful steam is generated which penetrates deep inside the garments making ironing both faster and better. Steam power can be regulated to suit your needs.

Continuous steam



Up to
120g/min

The more steam, the faster the ironing. The unique technology in a Philips steam generator iron generates powerful steam making ironing easier, better and faster.

Steam boost up to 200 g



200 g


The steam boost can be used for vertical steaming and tough creases.

Automatic cord winder



Thanks to the automatic cord winder, you can just press the button to automatically retract the power cord.

Ergonomic iron

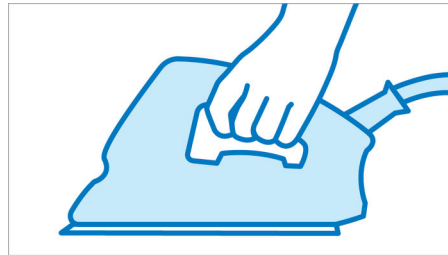

The ergonomic design of the iron facilitates comfortable ironing by putting less strain on the wrist. The upwardly sloping handle ensures a natural position reducing strain during ironing. The iron design also prevents the repetitive movements caused by placing an iron on its heel. The iron is light (1.2 kg) for an easy and comfortable ironing experience.

SteamGlide soleplate



The SteamGlide soleplate is the best Philips soleplate for your steam iron. It has great scratch resistance, glides excellently and is easy to clean.

Eco-setting

Save 20% energy and 40% water consumption by selecting the eco-setting on your Philips Iron. The eco-setting offers the most energy efficient way to obtain perfect ironing results.

Specifications

Fast and powerful crease removal

- Soleplate: SteamGlide
- Steam output
- Continuous steam output: 120 g/min
- Steam boost: 200 g
- Vertical steaming
- Pressure: Up to 5
- Variable steam settings
- Steam tip
- Power: 1800 - 2200 W

Easy to use

- Water tank capacity: 1000 ml + rinse tank 500 ml
- Filling and emptying water: Detachable water tank, Extra large filling hole
- Refill any time
- Soft grip
- Safety auto off
- Storage solution: Carry lock
- Cord storage: Automatic cord winder
- Power cord length: 1.8 m
- Hose length: 1.9 m

Sustainability

- ECO setting: 20% energy reduction

Calc management

- Suitable for tap water
- Calc clean solution: Automatic calc cleaning
- Calc clean reminder

Technical specifications

- Voltage: 220 - 240 V
- Product dimensions: 44.5 x 24.5 x 32.6 cm
- Weight of iron: 1.1 kg
- Weight of iron + base: 6.3 kg

Accessories

- Heat-resistant iron mat



Issue date 2018-08-03

Version: 10.0.1

© 2018 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com