

PHILIPS

Food processor

Aluminium
Collection

1000 W

Compact 3 in 1 setup

3.4 L bowl



HR7775/00



Effortless excellence

Food processor with the fastest juicing accessory

This Philips food processor HR7775/00 has some of the most advanced technologies. Its versatility is ensured by 10 accessories which easily perform 30+ functions. Additionally this Food Processor offers you a professional juicing accessory.

With professional juicing accessory

- Patented micromesh filter gets out more juice
- Up to 200% faster juicing vs. other food processor juicers

Powerful precision

- 1000 W motor
- Ice and pulse functions for chopping and crushing
- Adjustable blade for slices between 1-7 mm

Effortlessly easy

- 10 accessories to easily perform 30+ functions
- XL feeding tube takes whole fruits or vegetables
- Up to 7 portions in 1 go with the XL bowl

Stylishly compact

- Stylish design to fit your kitchen
- Compact 3-in-1 setup saves countertop space

Highlights

Up to 200% faster juicing



This food processor is the first to offer you a professional juicing accessory. Thanks to its extra large feeding tube and patented large metal mesh filter, it can juice up to 200% faster versus other food processor juicers. And thanks to its ergonomic design, it is quicker to clean and store.

Patented micromesh filter

The patented micromesh filter made of stainless steel squeezes every drop to give you more juice.

30+ functions



The – dishwasher safe – accessories are a kneading tool for mixing batter and for heavy kneading. A stainless steel chopping knife to prepare meat and vegetables. Two metal disks to handle medium and fine shredding and grating. Break resistant blender of 1.5 L for blending, crushing and stirring different ingredients. A citrus press for pressing citrus fruits. And a balloon beater for whipping and whisking and handling light batter.


Adjustable slicing blade

With the adjustable slicing blade, you can make slices as thin as 1 mm and up to 7 mm thick.

1000 W motor

With the powerful 1000 W motor of this Philips food processor you can adjust speed precisely to get desired results.

XL feeding tube

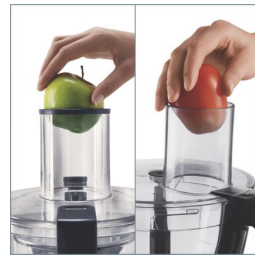

The XL feeding tube takes whole fruits and vegetables so you don't need to pre-cut them anymore.

XL 3.4 L bowl



The XL bowl allows for maximum volumes to be processed in one go: capacity for 2 l soup, 1.7 kg dough, 7 eggwhites.

Compact 3-in-1 setup

Compact 3-in-1 setup fits juicer, blender or bowl so uses up a minimum of space on your countertop.

Stylish design

Stylish and compact design looks great in every kitchen and takes up little space on your kitchen counter.

Specifications

Technical specifications

Voltage: 220–240 V

Bowl capacity dry: 3.4 L

Bowl volume capacity liquid: 2.0 L

Bowl working capacity dough: 1700 g

Bowl working capacity flour: 1000 g

Blender jar capacity: 1.5 L

Safety: Lid & bowl detection, mechanical 1.5 sec brake

Speeds: Variospeed

Juice extractor capacity: 1.5 L

Cord length: 120 cm

Accessories

Number of inserts/discs: 4

Reversible shredding disk: For medium/fine shredding

Adjustable slicing disk: For 1–7 mm slices of fruit & vegetables

Julienne/french fry disk: For julienne strips or french fries

Granulating disk: For grating of potatoes or cheese

Juice extractor: For juicing of apples, carrots etc

Spatula

Citrus press: For pressing of citrus fruits

Kneading tool: For kneading, heavy kneading, mixing dough, batter

Stainless steel chopping knife: chopping, Beating, creaming, crumbling, cutting, folding in, mashing

Balloon beater: For whipping, whisking, mixing and emulsifying

Break resistant blender: blending, crushing, foaming, grinding, pureeing, homogenizing, liquidizing, milling, shaking, stirring

Design specifications

Housing: ABS + brushed aluminium

Juice extractor: Stainless steel, ABS, SAN, POM

Knife holder, balloon beater: POM

Disks, chopping blade: Stainless steel

Speed knob: Brushed aluminium

Kneading tool, citrus press: PP

Function buttons: ice, pulse

Bowl including lid and blender: SAN

Pusher, inner pusher: ABS, SAN

Color(s): Aluminium and charcoal grey

General specifications

Integrated cord storage

Non-slip feet

Country of origin

China

