

PHILIPS

Garment Steamer

ComfortTouch Plus

FlexHead

MyEssence

StyleBoard

2000W



GC558/36



Easily de-wrinkle and refresh from top to bottom with FlexHead and MyEssence

Our new ComfortTouch Plus garment steamer effortlessly removes wrinkles from top to bottom thanks to innovative FlexHead and an extra-long StyleBoard. Refresh clothing with your favorite scents anytime you choose with MyEssence.

Refresh without washing or dry cleaning

- MyEssence to refresh clothes with your favorite scents
- Continuous steam removes odors and kills 99.9%* of bacteria

Quick crease removal

- Powerful continuous steam for fast crease removal
- Extra-long StyleBoard for better results from top to bottom

More efficient with less effort

- With FlexHead to easily reach the bottom of garments
- 5 steam settings for different kinds of fabric
- Hang&Lock keeps your hanger securely in place
- Easy Rinse descaling for years of effective use

Reliable and safe

- Safe on all ironable fabrics, no burns guaranteed
- Automatically switches to standby mode for peace of mind


Highlights

Refresh with MyEssence



Our innovative MyEssence fragrance infuser lets you refresh clothing with your favorite scents anytime you choose.

99.9% bacteria-free*

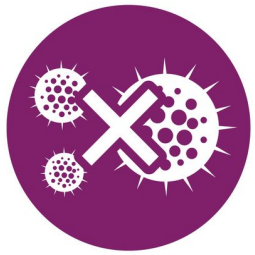

Hot steam refreshes your clothes and kills up to 99.9% of bacteria*. Less frequent washing and dry cleaning saves time and money, and helps clothes last longer.

Powerful continuous steam



Powerful continuous steam for fast crease removal

Extra-long StyleBoard

An extra long StyleBoard provides reliable support during steaming. Simply press the fabric between the steam plate and board for easier steaming with crisp results from top to bottom.

With handy FlexHead

Innovative FlexHead lets you steam the bottom of garments easily, with less bending and kneeling. The flexible steam plate ensures maximum contact with the fabric so less steam escapes for efficient results.

5 steam settings



Set your preferred steam setting for optimal results on different fabric. Use low steam for thinner fabrics and a more powerful setting for thicker fabrics and coats.

Hang&Lock



Our unique Hang&Lock feature holds your clothes hanger in place for convenient steaming. It prevents the hanger from swinging or falling off.

Easy Rinse descaling



Prolong the lifetime of your appliance by using the Easy Rinse descaling function regularly.

Safe on all ironable fabrics



The steamer is safe to use on all ironable fabrics and garments. The steam plate can be safely pressed against any clothing with no risk of burning – a great solution for delicate fabrics, like silk.

Auto shut off



The steamer automatically switches to standby mode when the water tank is empty, so you have peace of mind even if you forget to switch it off.

Specifications

Technology

MyEssence fragrance caps
FlexHead

Fast crease removal

Continuous steam: up to 40 g/min
Power: Max 2000 W
Ready to use: <1 min
Variable steam: 5 levels
Voltage: 220 - 240 V

Easy to use

Safe on all ironable fabrics: Even delicates like silk
Water tank capacity: 1800 ml
Detachable water tank
Hang&Lock
Hose length: 1.3 m

Power cord length: 1.6 m
Silicone steam hose
Auto shut off

Board cover

Top layer: 100% Cotton

Scale management

Descaling and cleaning: Easy Rinse

Accessories included

Brush
Glove for extra protection
MyEssence Fragrance caps
Adjustable double pole
Garment hanger

Size and weight

Packaging dimensions (WxHxL):
37x46x64.5 cm
Product dimensions (WxHxL): 33x173x37 cm

Guarantee

2 year worldwide guarantee

Design

Color: Purple Magic

Support for ironing

StyleBoard

