

# PHILIPS

Coffee maker

Daily Collection

With glass jug

With timer

Black & metal

HD7459/20



## Simply good coffee

With aroma twister for the best taste experience

Enjoy the taste and aroma of freshly brewed coffee with this reliable Philips coffee maker. Thanks to the aroma twister, enjoy an optimal taste in each cup of coffee. With the timer, you can wake up with the smell of fresh coffee.

### Great taste and aroma

- Aroma twister circulates the coffee for an optimal taste

### Designed around you


- 1,2 Liter capacity for 2 - 15 cups

### Easy to experience

- Drip stop to pour a cup of coffee whenever you like
- Auto shut-off after 30 min. for energy saving and safety
- Dishwasher-safe parts for easy cleaning
- Timer to wake up with the smell of fresh coffee
- Water level indication for easy filling

# Highlights


## Automatic shut-off (30 min)

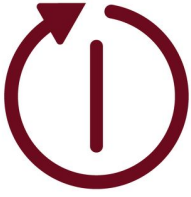

### Auto-off

30 Minutes after brewing your coffee, the coffeemaker switches off automatically for energy saving and safety. This is according to EU regulation, which is applicable for all coffee makers in the EU. If you want your coffee to stay hot longer, Philips offers coffee makers with a thermal jug.

## Drip stop

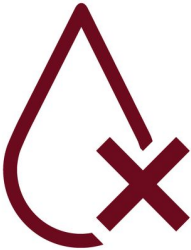


The drip stop allows you to pour a cup of coffee before the full brewing cycle is finished.

## Aroma twister



This smart nozzle inside the jug circulates the inflowing coffee evenly through the jug for an optimal and consistent aroma, from the first to the last cup.

## Dishwasher-safe parts

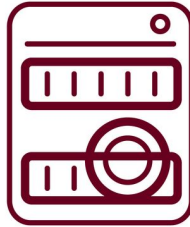

The jug and filter holder can be easily cleaned in the dishwasher.

## Timer



Wake up with the smell of fresh coffee thanks to the timer. Prepare your coffee maker, set the time, and a fresh jug of coffee is brewed at the time you desire.

## Smart water level indication



Fill the water tank easily and precisely with the water level indication.

## 1.2 Liter capacity



This coffee maker can brew 2 up to 10 (large) / 15 (small) cups of coffee. This is maximum 1,2 liter. However, this coffee maker has a compact design and takes little place in your kitchen.

# Specifications

## Accessories

Included: Glass jug

## Sustainability

Power consumption brewing: 1000 W

## Weight and dimensions

Dimensions of product (WxDxH): 210 x 240 x 320 mm

Weight of product: 1.42 kg

Weight incl. packaging: 1.94 kg

Dimensions of packaging (WxDxH): 299 260 x 380 mm

## General specifications

Special functions: Aroma twister

Type of display: LCD

Coffee drinks: Drip filter coffee

Suitable for: Ground coffee powder

Ease of use and comfort: Display, Water level indication, Automatic shut-off, Drip stop, Preset timer

Ease of cleaning & maintenance: Removable filter holder, Dishwasher-safe parts

## Finishing

Material water tank: Plastic

Material of main body: Stainless steel & plastic

## Service

2-year guarantee

## Design

Color: Black & Metal

## Technical specifications

Capacity water tank: Up to 15 cups

Brewing time for a jug: 10 min

Capacity water tank: 1.2 L

Cord length: 0.85 m

Voltage: 220 - 240 V

Frequency: 50/60 Hz

## Country of origin

Made in: China

