

# PHILIPS

Bagless vacuum cleaner

7000 series

Powerful 2100W motor

PowerCyclone 8

Allergy Lock

On board accessories



FC9732/61



## Picks-up and locks 99% of fine dust.\*

### Thanks to exceptional suction and Allergy Lock

The Philips Bagless Vacuum PowerPro Expert features our highest ever suction power. Make supreme cleaning effortlessly simple with PowerCyclone 8 technology and TriActive+ nozzle featuring 3 optimized cleaning actions in one.

#### Superior performance

- Powerful 2100W motor for high suction power
- PowerCyclone 8 delivers extreme suction power for longer
- Allergy Lock traps dust inside for a high level of hygiene
- TriActive+ nozzle to deliver high performance on all floors
- Allergy H13 filter system captures >99.9% of fine dust


#### Effortless cleaning

- On board accessories: Conveniently stored, always at hand
- Digital power control function to adjust suction power
- Dust container designed for hygienic emptying with one hand
- Soft brush integrated into handle, always ready to use



# Highlights

## Powerful 2100W motor

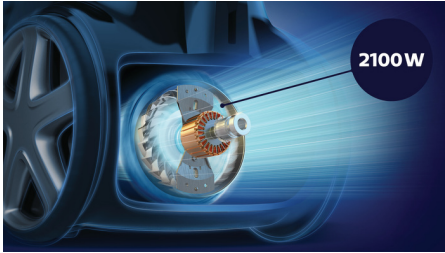

2100W motor generates up to 470W of extreme suction power for powerful performance and superior cleaning results.

## PowerCyclone 8 Technology



PowerCyclone 8 technology features a powerful, swirling action to maximize air flow and activate extreme suction power. Super accelerated air flow in the cylindrical chamber efficiently separates dust from the air at >185km/h, ensuring stronger suction power for longer, for superior cleaning results.

## Allergy lock



Allergy Lock system uses a sensor to ensure dust container is fully sealed before operating, trapping dust and allergens inside for a clean and ultra hygienic environment.

## TriActive+ nozzle



TriActive+ nozzle utilizes 3 cleaning actions in one go. It features a larger opening at the front to suck up larger debris while the specially designed soleplate removes dust from deep within carpets. Air channels and brushes on both sides of the nozzle pick up any dust and dirt alongside walls or furniture.

## On board accessories



Onboard accessories are stored conveniently inside the back compartment so they're always easy to access when you need them.

## Digital power control



Digital power control function easily adjusts suction power for different cleaning tasks, from hard floors to soft furnishings, with the touch of a button.

## Hygienic dust disposal



Easy-to-empty dust container is designed for hygienic disposal with one hand to help minimize dust cloud.

## Integrated brush



Dusting brush tool is built into the handle so it's always ready to use on furniture, flat surfaces and upholstery.



## IF DESIGN AWARD 2018

IF award-winning products and projects, concepts and more, selected by the top names in design. For 65 years, the iF DESIGN AWARD has been recognized as an arbiter of quality for exceptional design. The iF label is renowned worldwide for outstanding design services, and the iF DESIGN AWARD is one of the most important design prizes in the world.

# Specifications

## Performance

Airflow (max): 41 l/s  
Input power (IEC): 1800 W  
Input power (max): 2100 W  
Sound power level: <79 dB  
Suction power (max): 470 W

## Usability

Action radius: 10 m  
Carrying handle: Top and front  
Cord length: 7 m  
Tube type: Metal 2-piece telescopic tube  
Wheel type: Rubber  
Tube coupling: ActiveLock  
Power control: Electronic on appliance

## Design

Color: Deep black

## Filtration

Dust capacity: 2 L  
Exhaust filter: Allergy H13 filter  
Motor filter: Lifetime washable filter  
Filtration level: HEPA13 level\*\*

## Nozzles and accessories

Accessories included: Crevice tool, Small nozzle, Integrated brush  
Accessory storage: On board

Standard nozzle: TriActive+ nozzle

Extra accessories: Filter replacement: FC6042/01

## Sustainability

Packaging: > 90% recycled materials  
Stand-by power consumption: < 0,5 W  
User manual: 100% recycled paper

## Weight and dimensions

Dimensions of product (LxWxH):  
505x292x292 mm  
Weight of product: 5.5 kg

