


Philips Marathon
Bagless vacuum cleaner
with Tri-active nozzle

AutoClean

AnimalCare RemoteControl

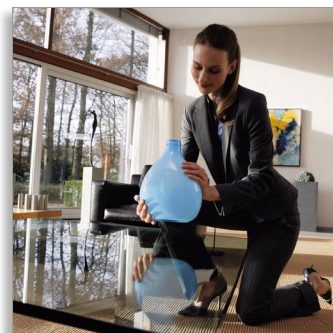

FC9239/01

Performs better for longer

Self-cleaning filter, no bag required

Optimal cleaning power every time

- AutoClean filter optimises suction power

Cleaning perfection

- 2000 Watt motor generating max. 400 Watt suction power

Highly efficient anti-allergy system

- HEPA AirSeal plus HEPA 13 washable filter

Easy cleaning even around furniture

- Tri-active nozzle with unique 3-in-1 action

Suction power control at your fingertips

- Handy remote control to change the suction power

PHILIPS
sense and simplicity

Specifications

Design

- Colour: Emperor red

Filtration

- Dust capacity: 1.5 l
- Exhaust filter: Ultra Clean Air HEPA 13 washable filter
- Filter type: HEPA
- HEPA AirSeal

Nozzles and accessories

- Accessories: Crevice tool, Small nozzle
- Accessory storage: On handgrip
- Additional nozzle: Turbo brush
- Standard nozzle: TriActive nozzle

Performance

- Airflow (max): 37 l/s

- Input power (IEC): 1800 W
- Input power (max): 2000 W
- Noise level (Lc IEC): 78 dB
- Suction power (max): 400 W
- Vacuum (max): 33 kPa

Usability


- Action radius: 12 m
- Carrying handle: Top and front
- Cord length: 9 m
- Coupling: Button
- Special features: Remote control (Infra-red)
- Tube type: Metal lacquered 2-piece telescopic tube
- Wheel type: Rubber

Weight and dimensions

- Weight of product: 7.5 kg


Highlights

AutoClean filter

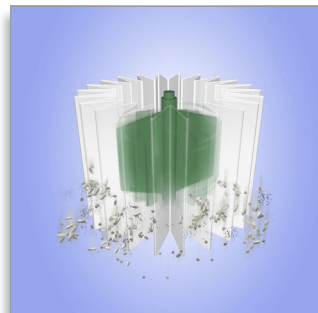

After every cleaning job, a simple push of a button will activate a rattle that thoroughly shakes the dust from the filter pleats into the dust bucket. Now the airflow is no longer blocked by the dust in the filter and suction power is almost like new.

2000 Watt motor

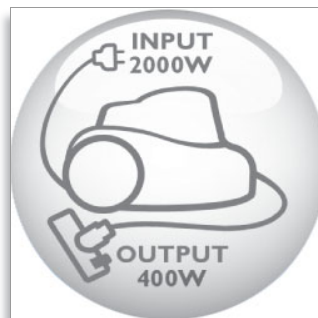

This vacuum cleaner has a 2000 Watt motor generating max. 400 Watt suction power for the ultimate cleaning perfection.

