




SENSEO® Viva Café Coffee pod machine

- SENSEO coffee boost technology
- Lychee pink
- Adjustable metal spout
- Direct start

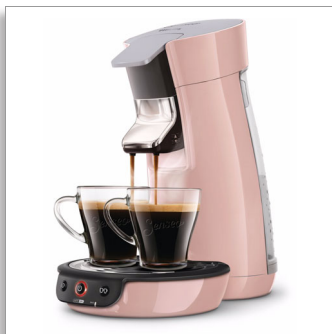

HD7829/31

Discover a fuller, richer flavor

SENSEO® coffee boost gets the most out of your pad

The SENSEO® Viva Café coffee machine maximizes the coffee taste thanks to the innovative SENSEO® coffee boost technology. The 45 aroma nozzles optimally spread the hot water across your entire pad, touching all 50 coffee beans at once.

Enjoy the best tasting SENSEO® coffee

- Coffee Boost gets the most out of your SENSEO® coffee pad
- Delicious coffee crema layer as proof of SENSEO® quality
- Unique brewing system for optimal taste and temperature

Coffee variety for every moment

- Vast variety of SENSEO® coffee blends and flavors
- Machine is tested >10.000 times to ensure consistent quality

Stylish design

- Adjust the coffee spout to fit your favorite cup or mug

Fast and easy operation

- The only coffee pod maker that brews two cups at a time
- Direct Start makes your coffee when the machine is heated up
- 30-minute auto shut-off for energy saving and safety
- The decalcifying light reminds you when to descale



* Based on retail sales volumes

Senseo

PHILIPS

Highlights

Coffee Boost technology



Coffee Boost technology disperses the hot water, via 45 aroma nozzles, evenly through each SENSEO® coffee pad. Get the most out of your coffee pad for the best tasting SENSEO® coffee.

Delicious coffee crema layer



The fine SENSEO® coffee selection and the unique SENSEO® brewing system make sure that your perfect cup of coffee always comes with a rich and delicious coffee foam layer - proof of premium taste and quality.

Decalcification indicator



The SENSEO® coffee maker reminds you when to descale. Descalcify with SENSEO®. Descalcify every 3 months to keep your appliance lime scale free; ensuring: maximal in-

cup volume; perfect coffee temperature, and; the appliance's durability. Do not use vinegar, since it might damage your SENSEO® appliance and affects the coffee taste.

Adjustable real metal spout



Adjust the spout's position to fit your favorite cup or mug

Variety of blends and flavors



SENSEO® has a vast variety of different coffee blends and flavors. Each blend has its own distinctive taste to fit your personal preference.

1 or 2 cups at the same time



Prepare 1 or 2 cups of your delicious SENSEO® coffee in less than a minute.

Automatic shut-off



The SENSEO® coffee maker automatically shuts off after 30 minutes after making coffee, for energy cost saving and appliance safety.

Unique brewing system

At SENSEO® we know how to get the best out of the coffee bean to make great tasting single serve coffee. The operation of the SENSEO® system is simple and brilliant. Water is pumped from the boiler to the coffee pad. The hot water releases the aroma from the pad and gives a perfect cup of coffee. SENSEO® always offers you quality that you can taste.

Direct start

When pressing the 1 or 2 cup button, while the appliance is heating-up, SENSEO® automatically starts brewing your delicious SENSEO® coffee.



Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Design

- Color: Lychee pink

Finishing

- Material drip tray: Metal
- Material of spout: Stainless steel

Country of origin

- Made in: Poland

General specifications

- Suitable for: Coffee pods
- Cups at the same time: 2
- Ease of cleaning & maintenance: Descale indicator, Dishwasher-safe parts
- Ease of use and comfort: Removable spout, Removable water tank, Automatic shut-off, Brew stop, Empty water tank indication, Direct start
- SENSEO coffee boost technology

Sustainability

- Power consumption brewing: 1450 W
- Power consumption stand-by: 0.36 W
- Made of recycled materials: 90% (paperwork and

packaging)

Service

- 2-year guarantee

Technical specifications

- Brewing time one cup: 30 sec
- Capacity water tank: 0.9 L
- Capacity water tank: Up to 6 cups
- Cord length: 0.8 m
- Frequency: 50 Hz
- Max. cup height: 100 - 120 mm
- Pump pressure: 1 bar
- Voltage: 220-240 V
- Brewing time two cups: <60 sec

Weight and dimensions

- Dimensions of packaging (WxDxH): 232 x 370 x 380 mm
- Dimensions of product (WxDxH): 190 x 310 x 340 mm
- Weight incl. packaging: 2.4 kg
- Weight of product: 1.75 kg