

# PHILIPS

Steam generator  
iron

PerfectCare Silence

Max 6 bar pump pressure

Up to 290 g steam boost

1.5 L water tank capacity  
with detachable water tank



GC9540/02



## Ultra fast and quiet ironing with no temperature adjustment required

Enjoy ironing with family around, while watching tv, without being disturbed by the noise. Philips PerfectCare Silence steam generator iron combines powerful steam and fast ironing at low sound.

### **No temperature setting needed, guaranteed no burn**

- Iron jeans to silk, no need to change temperature setting
- Safe to leave the hot soleplate on the ironing board

### **Fast ironing with continuous powerful steam**

- Powerful steam for ultimate crease removal
- Easy and efficient descaling system
- Superior gliding soleplate and scratch resistance
- Save energy with ECO mode

### **Extra convenience**

- Large detachable water tank for easy refilling
- Safe and secure carry lock
- Automatic switch off for safety and energy saving
- Enjoy powerful ironing with minimum noise



[asimpleswitch.com](http://asimpleswitch.com)

# Highlights

## 1.5 L detachable water tank




The detachable water tank allows you to easily refill anytime without stopping the appliance. It has a large filling hole so you can simply fill the water tank under the tap. It has a 1.5 L capacity, so you get the convenience of up to 1.5 hours of continuous use, with no need to top-up the tank.

## Easy De-Calc



Regular descaling protects your iron and ensures you'll continue to get the very best steam performance. The exclusively designed and ideally positioned Easy De-Calc Plus function provides the ideal way to get rid of lime scale and extend the lifespan of your steam generator iron. The iron will remind you with both light and sound when it's time to clean and descale. Then when your appliance is cold, simply remove the Easy De-Calc knob, collect the dirty water and scale into a cup and discard.

## Energy saving

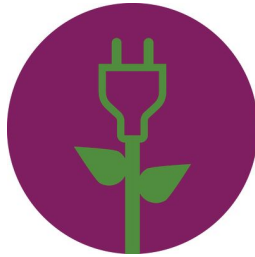

ECO mode allows you to save energy without compromising your ironing results. The ECO mode uses a reduced amount of steam, but still a sufficient amount to iron all your garments.

## OptimalTEMP technology



With OptimalTEMP technology you'll no longer have to waste time changing temperature settings, waiting for the temperature to adjust or pre-sorting clothes. Iron fabrics from jeans to silk, with guaranteed no burns thanks to the perfect combination of temperature and continuous powerful steam.

## Safe carry lock



Your steam generator iron includes a safe carry lock which securely fastens your iron to its base without the risk of slipping or someone touching the hot soleplate. It ensures safe and easy transportation around the house, to and from storage.

## Safe rest



Innovative OptimalTEMP technology guarantees no burn on all ironable fabrics. As well as the reassurance this provides whilst ironing, it also means you can leave the hot iron soleplate directly on your cotton ironing board without causing any damage. This helps to reduce any discomfort to your wrists, as you won't need to lift the iron to and from its base as often.

## Safety auto off



The safety auto off function automatically switches off your steam generator iron if it has not been used for a few minutes. This saves energy and gives you safety peace of mind.



[asimpleswitch.com](https://asimpleswitch.com)

## Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

# Specifications

## Easy to use

**Cord freedom (swivel):** 360 degree cord freedom  
**Detachable water tank**  
**Extra large filling hole**  
**Heat up time:** 2 min  
**Hose length:** 1.7 m  
**Low water alert**  
**Power cord length:** 1.8 m  
**Precision steam tip**  
**Ready to use:** Light indicator  
**Refill any time during use**  
**Safe on all ironable fabrics:** Even delicates like silk  
**Safety auto off**  
**Soleplate gliding performance:** 4 stars  
**Soleplate name:** SteamGlide  
**Soleplate scratch resistance:** 4 stars  
**Tap water suitable**  
**Water tank capacity:** 1500 ml

## Fast crease removal

**Continuous steam:** Up to 120 g/min  
**Power:** Max 2400 W  
**Pressure:** Max 6 bar pressure  
**Ready to use:** 2 min  
**Steam boost:** Up to 290 g  
**Steam-on-demand**  
**Variable steam levels**  
**Vertical steam**  
**Voltage:** 220 – 240 V

## Green efficiency

**Energy saving mode**  
**Product packaging:** 100% recycable  
**User manual:** 100% recycled paper

## Guarantee

**2 year worldwide guarantee**

## Scale management

**Descaling and cleaning:** Easy De-calc  
**Descaling reminder:** Light, Yes

## Size and weight

**Packaging dimensions (WxHxL):** 33.5 x 30.5 x 49.1 cm  
**Product dimensions (WxHxL):** 28.3 x 26.3 x 42.4 cm  
**Weight of iron:** 1.2 kg  
**Weight of iron + base:** 5.4 kg

## Storage

**Carry lock:** For transportation and safety  
**Cord storage:** Cord storage compartment  
**Hose storage:** Hose storage compartment

## Technology

**Cyclonic steam chamber**  
**For all ironable fabrics**  
**No burns**  
**No temperature settings needed**  
**OptimalTEMP technology**  
**Silent steam Technology**  
**Smart Control Processor**

