

# PHILIPS

Bagless vacuum cleaner

3000 series

1800 W

PowerCyclone 5

Allergy H13 filter



FC9350/62



## Higher suction power\* with PowerCyclone 5 Compact yet powerful

With the Philips Bagless Vacuum 3000 Series, compact design meets king-size performance. Enjoy thorough cleaning throughout your home thanks to PowerCyclone 5 technology and our MultiClean nozzle.

### Superior performance

- 1800 W durable motor for high suction power
- PowerCyclone 5 maintains high performance for longer
- MultiClean nozzle for thorough cleaning on all floors
- Allergy H13 filter system captures >99.9% of fine dust


### Effortless cleaning

- Dust container designed for hygienic emptying with one hand
- Compact and lightweight for easy carrying
- Soft brush integrated into handle, always ready to use
- ActiveLock couplings easily adjust to every task




# Highlights

## 1800 W durable motor

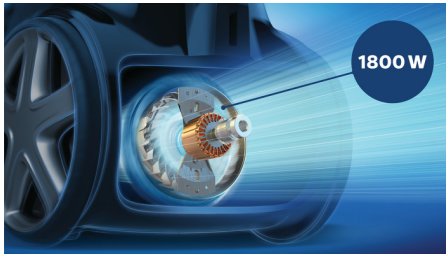

Durable 1800 W motor generates up to 360 W of high suction power for thorough cleaning results.

## PowerCyclone 5 technology

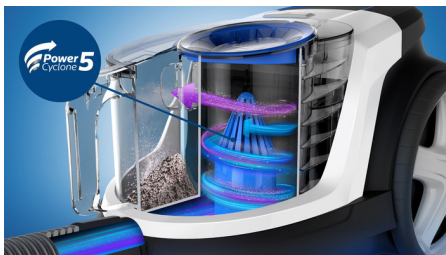

PowerCyclone 5 technology accelerates the air flow in the cylindrical chamber to separate dust from the air and maintain high performance and strong suction power for longer.

## MultiClean nozzle



MultiClean nozzle is designed to seal closely to the floor to ensure thorough cleaning across all floor types.

## Hygienic dust disposal



Easy-to-empty dust container is designed for hygienic disposal with one hand, to help minimise dust cloud.

## Compact and lightweight



Compact and lightweight design ensure both storing and carrying the vacuum is easy.

## Integrated brush



Dusting brush tool is built into the handle so it's always ready to use on furniture, flat surfaces and upholstery.

## Allergy H13 filter



The fully sealed filtration system captures >99.9% of fine dust particles - including pollen, pet hair and dust mites - for allergy

sufferers and anyone demanding a higher level of hygiene. Filtration level is equivalent to HEPA 13\*\*.

## ActiveLock couplings



ActiveLock couplings allow attachments to easily fit to the telescopic tube with a simple snap.



## IF GOLD DESIGN AWARD 2018

IF award-winning products and projects, concepts and more, selected by the top names in design. For 65 years, the iF DESIGN AWARD has been recognised as an arbiter of quality for exceptional design. The iF label is renowned worldwide for outstanding design services and the iF DESIGN AWARD is one of the most important design prizes in the world.

# Specifications

## Performance

Airflow (max): 37 l/s  
Input power (IEC): 1600 W  
Input power (max): 1800 W  
Sound power level: 82 dB  
Suction power (max): 360 W  
Vacuum (max): 33 kPa

## Usability

Action radius: 9 m  
Carrying handle: Front  
Cord length: 6 m  
Tube type: Metal 2-piece telescopic tube  
Wheel type: Plastic  
Tube coupling: ActiveLock

## Design

Colour: Deep black

## Filtration

Dust capacity: 1.5 l  
Exhaust filter: Allergy H13 filter  
Motor filter: Washable filter  
Filtration level: HEPA13 level\*\*

## Nozzles and accessories

Accessories included: Crevice tool, Integrated brush  
Accessory storage: On tubeclip  
Standard nozzle: MultiClean nozzle

## Sustainability

Packaging: > 90% recycled materials  
User manual: 100% recycled paper

## Weight and dimensions

Dimensions of product (LxWxH): 410 x 281 x 247 mm  
Weight of product: 4.5 kg  
Dimensions of packaging (L x W x H): 525 x 320 x 315 mm

## Accessories

Filter replacement kit: FC8010/02

