

# PHILIPS

## Kettle

1.7 L 2400 W

1 cup indicator

White grey

Hinged lid



HD4649/00



## Boil just what you need

Save up to 66% energy

The unique "one cup indicator" feature of this stylish designed Philips kettle HD4649/00 allows you to boil only the water you need. Therefore, you can easily save up to 66% energy and reduce your impact on environment.

### Boil what you need

- One cup indicator to boil only the water you need

### Easy to experience

- Easy lid and spout filling
- Hinged lid with large opening for easy filling and cleaning
- Easy to read water level indicators on both sides
- Light indicates when the kettle is switched on
- Power cord winder for easy storage
- Cordless 360° pirouette base for easy lifting and placing

### Fast boiling and easy cleaning

- Flat heating element for fast boiling and easy cleaning
- Anti-limescale filter for a clear cup of water

### Safe to use

- Multi safety system




asimpleswitch.com



asimpleswitch.com

# Highlights

## One cup indicator

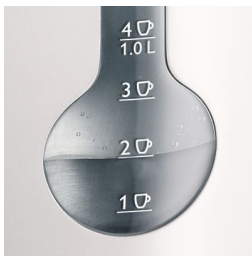

Enabling consumers to boil the amount of water they need, and therefore saving of up to 50% energy and water, contributing to a better environment.

## Pilot light



Elegant red light incorporated in the on/off switch indicates when the kettle is on.

## Easy lid and spout filling



The kettle can be filled via the spout or by opening the lid.

## Flat heating element



The stainless steel concealed element of the Philips kettle ensures fast boiling and easy cleaning.

## Cordless 360° pirouette base



Cordless 360° pirouette base for easy lifting and placing.

## Multi safety system

Multi safety system against boil-dry, with auto switch off when ready.

## Hinged lid



Hinged lid with large opening for easy filling and cleaning, also avoiding steam contact.

## Water level indicators



Easy to read water level indicators on both sides of the Philips electric kettle for left and right handed use.

## Power cord winder



The cord can be wrapped around the base, so that the kettle is easy to place in your kitchen.

## Anti-limescale filter



The removable anti-limescale filter ensures the water you pour into your cup is clean.



[asimpleswitch.com](http://asimpleswitch.com)

## Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

# Specifications

## Design specifications

**Materials:** Heating element: Stainless steel,  
Housing: Polypropylene/ ABS, Switch &  
toolholder: Polypropylene  
**Color(s):** White and grey

## General specifications

Cordless  
Non slip feet  
Ergonomic grip  
Easy spout filling  
Wide opening lid  
Cord storage

Automatic shut-off  
Boil-dry protection  
360 degrees base  
Lid as well as spout filling  
Flat heating element

## Technical specifications

Capacity: 1.7 L  
Power: 2400 W  
Cord length: 0.75 m  
Voltage: 220-240 V  
Frequency: 50-60 Hz

## Dimensions

**Product dimensions (WxDxH):**  
16x24.4x22.2 cm  
**Packaging dimensions (WxDxH):**  
23x19x27.5 cm

## Service

2-year worldwide guarantee

