

PHILIPS

Bagless Cylinder Vacuum Cleaner, Anti-Allergen

PowerPro Ultimate

Filters 99.9% dust, pet hair and pollen

HEPA 13 filter for cleaner air

3in1 nozzle for maximum dust pick up

Remote control



FC9920/69



Full performance with PowerCyclone Mess-free dust disposal

The new Philips PowerPro Ultimate bagless vacuum cleaner stands for superior cleaning performance. PowerCyclone 7 enables exceptional dust and air separation. The TriActiveMax nozzle provides excellent performance on all floors.

Mess-free dust disposal

- NanoClean Technology for mess-free dust disposal
- Extra-Ergonomic Dust Bucket for controlled emptying

Superior performance

- Ultra Clean Air HEPA 13 filter with 99.95% filtration
- Allergy H13 filter system captures >99.9% of fine dust
- Multi-Purpose nozzle
- PowerCyclone 8 technology separates dust from air



Highlights

NanoClean Technology



This new, innovative technology has been specially developed to prevent the usual dust cloud. The dust settles at the bottom of the dust bucket rather than staying in the air. When the bucket is opened, there is no dust cloud.

Extra-Ergonomic Dust Bucket




The side of the bucket has a specially designed spout-like shape. This enables you to empty the bucket in a controlled manner without spilling the dust.

Ultra Clean Air HEPA 13 filter




The Ultra Clean Air HEPA 13 filter captures at least 99.95% of all dust, providing a clean and allergen-free environment.

Allergy H13 filter system

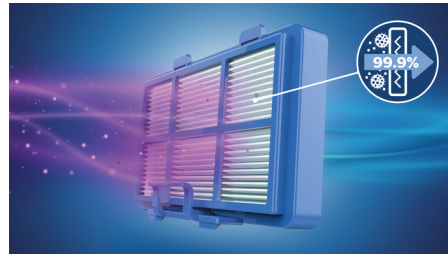

The fully sealed filtration system captures >99.9% of fine dust particles—including pollen, pet hair and dust mites—for allergy sufferers and anyone demanding a higher level of hygiene. Filtration level is equivalent to HEPA 13*.

TriActiveMax nozzle

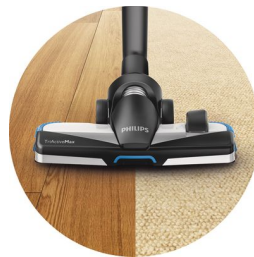

The TriActiveMax nozzle forms a perfect seal with the floor and performs 3 actions in one go to thoroughly clean your floors: 1) A specially designed soleplate gently opens the carpet and removes the dust from deep down. 2) Larger front opening picks up bigger particles. 3) Side brushes ensure perfect cleaning along plinths.

Powerful cyclonic action



Exclusive PowerCyclone 8 technology quickly accelerates air in the cyclonic chamber to separate out dust. The powerful swirling action maximises airflow and performance for remarkable cleaning results.



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas — Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.



5-year warranty

Register at philips.com/welcome within 3 months of purchase to enjoy 5-year warranty on the motor for free!

Specifications

Performance

Airflow (max): 27 l/s
Input power (IEC): 650 W
Sound power level: 75 dB
Vacuum (max): 17 kPa

Usability

Action radius: 11 m
Carrying handle: Top and front
Cord length: 8 m
Tube type: Aluminium 2-P telescopic tube
Wheel type: Rubber
Tube coupling: SmartLock
Power control: Electronic on appliance

Design

Colour: Sparkle Black

Filtration

Dust capacity: 2.2 l
Exhaust filter: Allergy H13 filter
Motor filter: Lifetime washable filter
Filtration level: HEPA13 level**

Nozzles and accessories

Accessories included: Crevice tool, 2-in-1 brush/small nozzle
Additional nozzle: Hard floor nozzle
Standard nozzle: TriActiveMax nozzle

Sustainability

Packaging: > 90% recycled materials
User manual: 100% recycled paper

Weight and dimensions

Dimensions of product (LxWxH): 506 x 310 x 317 mm
Weight of product: 6.2 kg
Dimensions of packaging (L x W x H): 595 x 400 x 352 mm

