



Philips IntelliCare  
Pressurised steam  
generator

Auto Calc Clean  
ECO



GC9140

# Powerful and hassle-free ironing

Iron with Auto Calc-Clean function

This powerful and fast Philips ironing system GC9140/02 takes away hassles with the unique Auto Calc-Clean function. Removing scale from the iron is something you no longer have to do. Giving you a superb ironing experience, hassle-free

#### **Hassle-free scale removal**

- Removes calc from your system automatically

#### **Fast and powerful ironing**

- Up to 5 bars of steam pressure for fast ironing
- Continuous steam up to 120 g/min
- Steam boost up to 200 g for tough wrinkle removal

#### **Comfortable ironing**

- Ergonomically and lightweight 1.2kg iron
- SteamGlide soleplate is Philips premium soleplate

#### **Easy to use**

- Easy one touch cord storage- just press the button

#### **Save energy consumption**

- Save 20% energy and 40% water consumption

# PHILIPS

# Highlights

## Auto Calc-Clean function

The Auto Calc-Clean function automatically cleans your ironing system from calc. A 2-minute scale removal cycle is activated automatically when it is time to clean your system. All you have to do is empty the detachable rinse tank. It keeps your system as new and powerful as the day you bought it.

## Up to 5 bar

5 bar

Double your ironing speed with pressurized steam. The pressurised steam from your Philips iron penetrates deep into fabrics, making your ironing fast and easy, even on difficult fabrics.

## Continuous steam up to 120 g/m



The Philips iron has a continuous steam output up to 120 g/min thanks to the small amounts of water that are pumped into the boiler each time. For perfect and fast crease removal.

## Steam boost up to 200 g




Steam boost enables you to easily remove even the most stubborn creases.

## Automatic cord winder



Thanks to the automatic cord winder, you can just press the button to automatically retract the powercord.

## Ergonomic iron

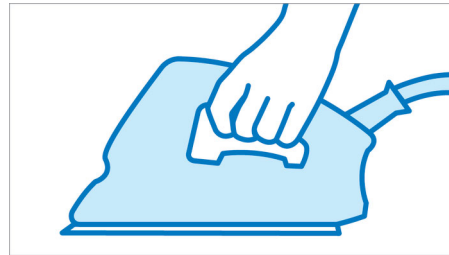

The ergonomic design of the iron facilitates comfortable ironing by putting less strain on the wrist. The upward sloping handle ensures a natural position reducing strain during ironing. The iron design also prevents the repetitive movements caused by placing an iron on its heel. The iron is light (1.2kg) for an easy & comfortable ironing experience.

## SteamGlide soleplate



SteamGlide soleplate is the best Philips soleplate for your steam iron. It has great scratch resistancy, glides excellent and is easy to clean.

## Eco-setting

Save 20% energy and 40% water consumption by selecting the eco-setting on your Philips Iron. The eco-setting offers the most energy efficient way to obtain perfect ironing results.

# Specifications

## Fast & powerful crease removal

- Soleplate: SteamGlide
- Continuous steam output
- Continuous steam output: 120 g/min
- Steam boost: 200 g
- Vertical steam
- Steam pressure: Up to 5 bar
- Variable steam settings
- Steam tip
- Power: 1800 - 2200 W

## Easy to use

- Water tank capacity: 1000 ml + rinse tank 500 ml
- Filling and emptying water: Detachable water tank, Extra large filling hole
- Refill any time
- Soft grip
- Safety auto off
- Storage solution: Carry lock
- Cord storage: Automatic cord winder
- Power cord length: 1.8 m
- Hose length: 1.9 m

## Sustainability

- ECO setting: 20% energy reduction

## Calc management

- Suitable for tap water
- Calc clean solution: Automatic calc cleaning
- Calc clean reminder

## Technical specifications

- Voltage: 220 - 240 V
- Product dimensions: 44.5 x 24.5 x 32.6 cm
- Weight of iron: 1.1 kg
- Weight of iron + base: 6.3 kg

## Accessories

- Heat resistant iron mat

