

PHILIPS

Steam generator
iron

SpeedCare

Max 4.2 bar pump pressure

1.2-l fixed water tank

GC6611



Ironing faster with twice as much steam**

The Philips SpeedCare steam generator delivers more steam than a steam iron, helping you to speed up your ironing. Enjoy more quality time with your family thanks to the reduced ironing time with the Philips SpeedCare steam generator iron.

Fast and powerful ironing

- Max 4.2 bars pump pressure
- Tap water-friendly, refill any time during ironing
- Steam boost up to 120 g
- Ready to use in 2 minutes with unlimited refill
- Triple precision tip for optimal control and visibility
- Non-stick soleplate coating
- Smart Calc cleaning system with a sound and light cleaning reminder
- 1.2-l water tank and refill at any time during ironing
- Compact size and light weight for easy storage

Highlights

Steam ready in 2 minutes




Steam is ready to use in 2 minutes and can be refilled at any time during ironing.

1.2-l water tank



The SpeedCare steam generator has a 1.2-l water tank capacity to allow you to iron for over an hour. It helps to reduce the number of refills required for large laundry loads. The technology will also allow you refill the water tank during ironing without the appliance cooling down for 2 hours while it is waiting to be refilled.

Triple precision tip

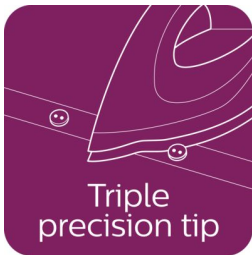

The tip of this Philips iron is precise in 3 ways: it has a pointed tip, button groove and a sleek nose design. The triple precision tip enables you to reach even the most tricky areas, e.g. around the buttons or between the pleats.

Non-stick soleplate



The soleplate of your Philips iron is coated with a special non-stick layer for good gliding performance on all fabrics.

Compact size and light weight



Thanks to the revolutionary ProVelocity technology, we made your steam generator iron more compact than ever before. The compact steam generator fits easily on your ironing board making your ironing more convenient. In addition, your steam generator takes much less storage space.

Smart Calc cleaning system



The Smart Calc cleaning system is an integrated descaling and cleaning function that protects your steam generator iron. After around 10 hours of ironing, your steam generator iron will remind you to perform the Calc cleaning process with a sound and light notification. The

iron conveniently rests on the Calc container as it collects the dirty water, so you don't have to strain to hold the iron during the process. After all the water has been collected in the container, your steam generator iron is ready to use again.

Max 4.2 bars pump pressure



The more steam, the faster the ironing. Consistent powerful steam is generated which penetrates deep inside the garments making ironing both faster and better. Steam power can be regulated to suit your needs.

Refill with tap water any time



Your steam generator iron is designed to use tap water. While ironing, when the water tank runs out of water, you can easily refill it without having to wait or turn off your appliance.

Steam boost up to 120 g

The steam boost can be used for vertical steaming and tough creases.

Specifications

Calc management

Suitable for tap water
Calc clean solution: Smart Calc Clean
Calc clean reminder
Filtered water recommended

Easy to use

Water tank capacity: 1200 ml
Filling and emptying water: Extra-large filling hole
Refill any time
Heat-up time: 2 min
Hose storage: Hose storage compartment

Cord freedom (swivel): 180 degree cord freedom

Hose length: 1.6 m
Power cord length: 1.8 m

Fast and powerful crease removal

Vertical steaming
Pressure: Max 4.2 bar pump pressure
Power: 2400 W
Continuous steam output: 95 g/min
Steam boost: 120 g

Weight and dimensions

Packaging dimensions (W x H x D): 26.4 x 30.3 x 40.4 cm
Product dimensions (W x H x D): 19.8 x 21.7 x 34.6 cm
Weight of iron: 1.1 kg
Weight of iron + base: 2.6 kg

Service

2-year worldwide guarantee

