

PHILIPS

Vacuum cleaner
with bag

PerformerPro

2200W

HEPA 13 filter

5L

Remote control



FC9199/02



Highest suction power, even as the bag fills up* with 2200W motor and 5L dust capacity

With its powerful 2200W motor and specially designed dust chamber, Philips PerformerPro vacuum cleaner maintains high airflow, giving you the highest suction power. For great cleaning results, even as the bag fills up!*

Excellent cleaning results

- 2200 Watt motor generating max. 500W suction power
- New 3-in-1 TriActive+ nozzle picks up coarse and fine dust
- Revolutionary Airflow Max technology for extreme suction
- 5L dust capacity for longer cleaning
- Super Parquet nozzle removes 3 x more sticky dirt

Convenience

- 360Flex hose swivel for smooth maneuvering
- SmartLock coupling to easily adjust to each cleaning task
- Long reach for convenient cleaning
- Remote control for no bend, with IR wireless technology

Integrated Anti-Allergy system

- s-bag Ultra Long Performance captures even more fine dust
- HEPA AirSeal with HEPA 13 filter retains 99.99% of dust
- Allergy friendly quality tested by ECARF

Highlights

2200 Watt motor



2200 W motor generates max. 500W suction power for excellent cleaning results.

360Flex hose swivel


The Philips 360Flex hose swivel offers full 360 degrees of rotation of the hose for smooth maneuvering of the vacuum cleaner around your house.

SmartLock coupling



The unique Philips SmartLock coupling on nozzles and the telescopic tube easily connects, and disconnects, these parts during cleaning. The SmartLock coupling intuitively allows you to adjust the telescopic tube to your preferred height.

Long reach

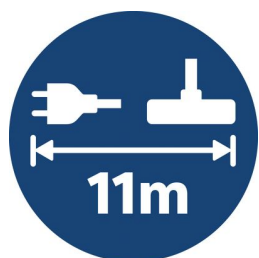

11 m reach allows you to clean a larger surface without having to switch the plug.

TriActive+ nozzle



The TriActive+ nozzle applies 3 cleaning actions in one go: 1) It gently opens the carpet with its specially designed soleplate to remove the dust deep down. 2) It sucks up big bits with its larger opening at the front. 3) It sweeps up the dust and dirt alongside furniture and walls with its two side brushes.

s-bag Ultra Long Performance



The Philips s-bag Ultra Long Performance made of five layers of high quality, non-clogging material captures even the finest dust. This excellent filtration gives you a better cleaning result and clean air in your home. The multilayer filtration also maintains the vacuum cleaners high suction power during the entire lifetime of the bag. The s-bag ULP has been tested and certified by the independent test institute TÜV Rheinland Group, proven to last up to 80% longer than a standard dustbag.

Airflow Max technology



Airflow Max technology maximizes the airflow, allowing the dustbag to unfold uniformly, so you get the highest suction power, even as the bag fills-up!

HEPA AirSeal with HEPA 13



HEPA 13 filter and AirSeal capture even the finest dust before the air is blown out for a dust-free environment and clean, allergen free air. The exhaust air is even cleaner than the air in the room.

5L dust capacity



The specially designed 5L dust chamber allows you to make optimal use of your dust bag, so you can clean for longer.

ECARF certified



This vacuum cleaner with HEPA 13 filtration is certified as Allergy friendly by the European Centre for Allergy Research Foundation. The HEPA 13 filter purifies the exhaust air up to 99,95% of allergens from; cat & dog hairs, dust mites or pollen to support an allergy friendly home environment.

Specifications

Design

Color: Titanium

Performance

Airflow (max): 51 l/s

Input power (IEC): 1800 W

Input power (max): 2200 W

Sound power level: 79 dB

Suction power (max): 500 W

Vacuum (max): 36 kPa

Filtration

Dust bag type: s-bag Ultra Long Performance

Exhaust filter: Ultra Clean Air HEPA 13 filter

Motor filter: Triple layer

Dust capacity: 5 L

EPA AirSeal

Usability

Tube type: Metal 2-piece telescopic tube

Carrying handle: Top and front

Dust full indicator

Tube coupling: SmartLock

Wheel type: Rubber

Power control: Electronic on appliance,

Remote control

Action radius: 11 m

Cord length: 8 m

Nozzles and accessories

Standard nozzle: TriActive+ nozzle

Accessory storage: On tubeclip

Additional nozzle: Super Parquet nozzle

Weight and dimensions

Weight of product: 5.0 kg

Dimensions of product (LxWxH): 500 x 310 x 300 mm

