

PHILIPS

Steam iron

EasySpeed

Steam 35g/min; 110g steam boost

Ceramic soleplate

Safety Auto off + Anti-calc

2200 Watts

GC2046/20



Fast, from start to finish

3 ways to speed up your ironing

The EasySpeed iron speeds up your ironing thanks to: triple precision tip, even heat distribution across the soleplate and continuous steam.

Easily removes creases

- Power up to 2200 W enabling constant high steam output
- 110-g steam boost to remove stubborn creases easily
- Continuous steam output up to 35 g/min
- Ceramic soleplate for better gliding performance
- Vertical steam for crease removal in hanging fabrics

Longer lifetime

- Calc clean slider to easily remove scale out of your iron

Comfortable ironing

- Iron switches off automatically when left unattended
- Drip-stop system keeps your garments spotless while ironing
- Triple precision tip for optimal control and visibility
- Even steam distribution for efficient ironing
- A fine spray evenly moistens the fabric

Highlights

Power up to 2200 W



Power up to 2200 W enables constant high steam output.

Steam boost up to 110 g



The iron's 110 g steam boost enables you to easily remove even the most stubborn creases.

Steam output up to 35 g/min



Continuous steam output of up to 35 g/min gives you the perfect amount of steam to efficiently remove all creases.

Ceramic soleplate



Ceramic soleplate is scratch-resistant, glides well and is easy to clean.

Vertical steam



This Philips iron has a vertical steam function, for crease removal in hanging fabrics.

Calc clean slider



This steam iron can be operated with normal tap water, and the calc clean slider makes it easy to remove any built-up scale from your iron. To maintain the performance of your Philips steam iron, you should use this scale clean function once a month when using normal tap water.

Safety auto off




The iron shuts off automatically when left unattended. If it is left on its heelrest it will switch off in 8 minutes. When left on the soleplate or on the side, it only takes 30 seconds before the iron shuts off.

Drip stop system



Drip-Stop system lets you iron delicate fabrics at low temperatures without having to worry about stains from water droplets.

Triple precision tip

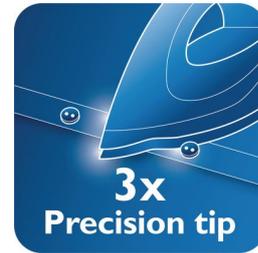

The tip of this Philips iron is precise in 3 ways: it has a pointed tip, button groove and a sleek nose design. The triple precision tip enables you to reach even the most tricky areas, e.g. around the buttons or between the pleats.

Even steam distribution

Thanks to the carefully crafted soleplate design, the steam is distributed evenly across the soleplate. This way you need fewer strokes to evenly moisten the garment and therefore less time to complete the ironing.

Spray



The spray function produces a fine mist that evenly moistens the fabric, making it easier to iron out creases.

Specifications

Fast and powerful crease removal

Soleplate: Ceramic soleplate

Steam output

Continuous steam output: 35 g/min

Steam boost: 110 g

Vertical steaming

Spray

Power: 2200 W

Easy to use

Water tank capacity: 270 ml

Drip stop

Safety auto off

Reaching tricky areas: Triple precision tip

Calc management

Calc clean solution: Self-clean

