

PHILIPS

Fully automatic
espresso machines

Series 5000

6 Beverages

LatteGo

Stainless Steel

AquaClean



EP5335/10



6 coffee varieties from fresh beans made easy LatteGo, the fastest to clean milk system ever*

Easily make aromatic coffee varieties like Espresso, Coffee, Cappuccino and Latte Macchiato at the touch of a button. LatteGo tops milk varieties with silky smooth froth, is easy to set up and can be cleaned in as little as 15 seconds*.

High quality coffee from fresh beans

- 20,000 cups of finest coffee with durable ceramic grinders
- Coffee at the perfect temperature with our Thermoblock
- Keep your beans fresh for longer thanks to the aroma seal

A variety of coffees customized to your taste

- Enjoy 6 beverages at your fingertips, including café au lait
- Silky smooth milk froth thanks to high speed LatteGo system
- Adjust the volume, 5 aroma strength and 5 grinder settings
- Individually adjust and save your favorite coffee varieties

Effortless use and cleaning for everyday enjoyment

- LatteGo is exceptionally easy to clean: 2 parts, no tubes
- Up to 5000 cups* without descaling thanks to AquaClean
- Easy cleaning thanks to fully removable brew group
- Both parts of LatteGo are dishwasher safe
- Storage lid on LatteGo keeps your milk fresh in the fridge


Highlights

6 beverages




Enjoy a wide variety of drinks to suit any occasion. Whether you crave for an espresso, a coffee or a milk based recipe, your Super-automatic machine delivers a perfect in-cup result with no hassle and in no time!

LatteGo milk system

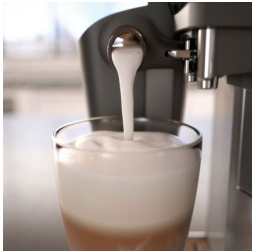

Top your coffee off with a silky-smooth layer of milk froth. The LatteGo mixes milk and air at high speed in the round frothing chamber, then adds a splash-free, creamy layer of milk froth to your cup at just the right temperature.

2 parts, no tubes milk system

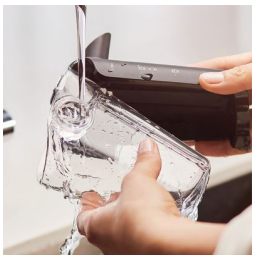

Our 2 parts milk system has no tubes or hidden parts and can be cleaned in as little as 15 seconds under tap* or in the dishwasher.

Dishwasher safe



For your convenience, you can put LatteGo in the dishwasher. This will save time and ensure a hygienic cleaning.

100% ceramic grinders



Our grinders are 100% pure ceramic: extremely hard and precise, so you can enjoy fresh aromatic coffee, for at least 20.000 cups.

AquaClean filter



By changing the filter after being prompted by the machine, you will not need to descale your machine for up to 5000 cups*, while enjoying clear and purified water.

Storage Lid



For easy and convenient storage in the fridge or outside you can use the dedicated storage lid for LatteGo

User Profile



To set the volume of any beverage, press and hold the button of the beverage until the display shows the MEMO icon. Press the OK button when the cup contains the desired amount. When you brew a recipe, the selected aroma strength is automatically saved.

Customize your coffees



This Fully-Automatic machine offers an abundance of indulgent options to customize your beverage to your taste. You can easily personalize and memorize length, strength and temperature for each drink. Feel free to explore, experiment and dream up any drink!

Specifications

Country of origin

Made in: Romania

General specifications

Ease of cleaning & maintenance: AquaClean filter compatible

Type of carafe: LatteGo

Milk Solution: LatteGo

User Interface: Basic Display

Technical specifications

Capacity milk carafe: 0.26 L

Capacity waste container: 15 servings

Frequency: 50 Hz

Max. cup height: 150 mm

Voltage: 230 V

Color & Finishing: Stainless Steel

Cord length: >100 cm

Waste container: Frontal access

Water tank: Access from the top

Weight of product: 7.2 kg

Product dimensions: 221 x 340 x 430 mm

Coffee bean capacity: 250 g

Capacity water tank: 1.8 L

Customization

Aroma Strength Settings: 5

Grinder Settings: 5

Pre Brew Aroma control: No

User Profiles: 1

Temperature settings: 3

Coffee and Milk Length: Adjustable

Variety

Beverages: Espresso, Hot water, Cappuccino, Coffee, Milk froth, Latte Macchiato, Café au Lait, Americano

Coffee Powder Option

Double Cup

Milk Double Cup: No

Other features

Auto-Rinse & Guided descaling

Main Switch ON / OFF button

Quick Heat Boiler

Removable brew group

