

PHILIPS

Bagless vacuum cleaner

PowerPro Active

PowerCyclone 4 technology

TriActive+ nozzle

Long reach tool

FC9522/09



Full performance

Less energy consumption

The new Philips PowerPro Active delivers full cleaning performance thanks to the PowerCyclone 4 technology and the TriActive+ nozzle, engineered for high dust removal. The dust bucket is easy to empty, with no dust clouds.

Remarkable cleaning results

- A-class performance on hard floors
- PowerCyclone 4 technology separates dust and air in one go
- New 3-in-1 TriActive+ nozzle picks up coarse and fine dust

Extreme Convenience

- Long reach tool for difficult to access areas
- Variable power setting
- Advanced dust container design for easy to emptying

Clean air filter system

- EPA10 filter system with AirSeal for healthy air

B

Highlights

A-class on hard floors



This product achieves the highest cleaning performance class on hard floors. 100% of dust is picked up!

PowerCyclone 4 Technology




PowerCyclone 4 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber to separate the dust from the air.

TriActive+ nozzle




The TriActive+ nozzle applies 3 cleaning actions in one go: 1) It gently opens the carpet with its specially designed soleplate to remove the dust deep down. 2) It sucks up big bits with its larger opening at the front. 3) It sweeps up the dust and dirt alongside furniture and walls with its two side brushes.

Long reach tool

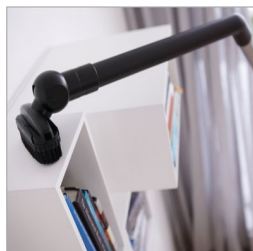

The Long reach tool is a clever accessory which helps you clean difficult areas like the top of the furniture or high shelves. The angle of the brush is adjustable, so you can have the exact instrument for your needs.

Power control

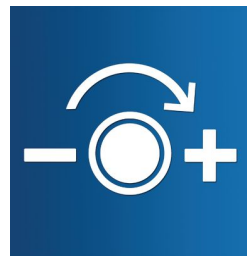

The variable power setting allows you to select the optimal level of suction for the different types of surfaces you vacuum.

Easy to empty dust container



The dust container is perfectly designed to dispose dust without creating a dust cloud. Thanks to its unique shape and smooth surface, dust is collected at one side of the container and evenly glides into the dust bin.

EPA10 Clean air system



EPA10 filter and AirSeal capture the finest dust before the air is blown out for a dust-free environment and clean, healthy air.

Specifications

Performance

Annual energy consumption: 33,6 kW·h
Sound power level: 78 dB
Input power (IEC): 750 W
Airflow (max): 27,8 l/s
Vacuum (max): 16,8 kPa

Design

Color: Deep black

Filtration

Dust capacity: 1.7 L
Exhaust filter: Microfilter
Motor filter: EPA 10 washable filter

Usability

Action radius: 9 m
Cord length: 6 m
Power control: Electronic on appliance
Tube type: Metal 2-piece telescopic tube
Tube coupling: Conical
Wheel type: Rubber
Carrying handle: Top and front

Nozzles and accessories

Standard nozzle: TriActive+ nozzle
Accessories included: Crevice tool, Small nozzle

Extra accessories: Long reach tool
Accessory storage: On tubeclip
Additional nozzle: Hard floor nozzle

Weight and dimensions

Weight of product: 6 kg
Dimensions of product (LxWxH): 473 x 304 x 301 mm

Sustainability

Packaging: > 90% recycled materials
User manual: 100% recycled paper

