

PHILIPS

Steam iron

EnergyCare

2400 W

160 g steam boost

Safety auto off



GC3760/32



100% steam power, 20%* less energy Greener Everyday

The innovative feature in the Philips steam iron, makes sure you get the 100% steam power to remove creases thoroughly. At the same time, it saves 20%* energy automatically, because it eliminates wasted steam.

Auto Energy Saving

- Automatic Energy Saving

Comfortable ironing

- Soft grip for lasting ironing comfort
- Steam boost up to 160 g

Safe ironing

- Iron switches off automatically when left unattended

Reaches into tricky areas

- Steam tip allows you to have steam in hard-to-reach areas

Longer lifetime

- Double Active Calc System prevents scale build-up



asimpleswitch.com

Highlights

Double Active Calc System



Double Active Calc system of your Philips steam iron prevents scale build-up through anti scale pills and an easy to use calc clean function.

Auto Energy Saving



Automatic Energy Saving The innovative feature in the Philips steam iron, makes sure you get the 100% steam power to remove creases thoroughly. At the same time, it saves energy automatically, because it eliminates wasted steam.

Soft grip

The soft handgrip of this Philips iron allows for comfortable ironing even during longer sessions.

Up to 40 g/min of steam



Philips steam iron with continuous steam output of up to 40 g/min gives you the perfect amount of steam to efficiently remove all creases.

Automatic shut-off

Safety auto off


The iron shuts off automatically when left unattended. If it is left on it's heelrest it will switch off in 8 minutes. When left on the soleplate or on the side, it only takes 30 seconds before the iron shuts off.

Steam boost up to 160 g



The steam boost can be used for vertical steaming and tough creases.

Steam tip

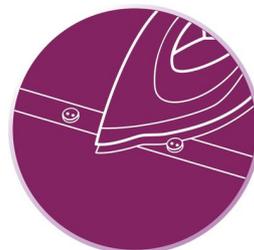

The unique steam tip of this Philips iron, combines a particularly pointed front of the soleplate with special elongated steam slots in the tip, to reach right into the smallest and most difficult areas for the best ironing results.

Specifications

Fast & powerful crease removal

Soleplate: SteamGlide
 Continuous steam output: 40 g/min
 Steam boost: 160 g
 Vertical steaming
 Spray
 Steam tip
 Power: 2400 W

Easy to use

Water tank capacity: 300 ml
 Filling and emptying water: Extra large filling hole
 Drip stop
 Soft grip
 Safety auto off
 Cord storage: Cord clip
 Cord freedom (swivel): 180 degree cord freedom

Sustainability

Energy saving: 20% energy reduction

Calc management

Suitable for tap water
 Calc clean solution: Double active calc clean

Technical specifications

Weight of iron: 1.6 kg
 Voltage: 220 - 240 V
 Cord length: 2.5 m



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

