

# PHILIPS

Vacuum cleaner  
with bag

PerformerPro

2200W

HEPA 13 filter

5L

FC9190/01



## Highest suction power, even as the bag fills up\* with 2200W motor and 5L dust capacity

With its powerful 2200W motor and specially designed dust chamber, Philips PerformerPro vacuum cleaner maintains high airflow, giving you the highest suction power. For great cleaning results, even as the bag fills up!\*

### Excellent cleaning results

- 2200 Watt motor generating max. 500W suction power
- Revolutionary Airflow Max technology for extreme suction
- 5L dust capacity for longer cleaning
- New 3-in-1 TriActive+ nozzle picks up coarse and fine dust

### Integrated Anti-Allergy system

- HEPA AirSeal with HEPA 13 filter retains 99.99% of dust
- Allergy friendly quality tested by ECARF
- s-bag Ultra Long Performance captures even more fine dust

### Convenience

- Long reach for convenient cleaning
- 360Flex hose swivel for smooth maneuvering
- SmartLock coupling to easily adjust to each cleaning task
- Extra long grip with air slide for farther reach

# Highlights

## 2200 Watt motor



2200 W motor generates max. 500W suction power for excellent cleaning results.

## Airflow Max technology



Airflow Max technology maximizes the airflow, allowing the dustbag to unfold uniformly, so you get the highest suction power, even as the bag fills-up!

## 5L dust capacity



The specially designed 5L dust chamber allows you to make optimal use of your dust bag, so you can clean for longer.

## TriActive+ nozzle



The TriActive+ nozzle applies 3 cleaning actions in one go: 1) It gently opens the carpet with its specially designed soleplate to remove the dust deep down. 2) It sucks up big bits with

its larger opening at the front. 3) It sweeps up the dust and dirt alongside furniture and walls with its two side brushes.

## HEPA AirSeal with HEPA 13



HEPA 13 filter and AirSeal capture even the finest dust before the air is blown out for a dust-free environment and clean, allergen free air. The exhaust air is even cleaner than the air in the room.

## ECARF certified



This vacuum cleaner with HEPA 13 filtration is certified as Allergy friendly by the European Centre for Allergy Research Foundation. The HEPA 13 filter purifies the exhaust air up to 99,95% of allergens from; cat & dog hairs, dust mites or pollen to support an allergy friendly home environment.


## s-bag Ultra Long Performance



The Philips s-bag Ultra Long Performance made of five layers of high quality, non-clogging material captures even the finest dust. This excellent filtration gives you a better cleaning result and clean air in your home. The multilayer filtration also maintains the vacuum cleaners high suction power during the entire lifetime of the bag. The s-bag ULP has been

tested and certified by the independent test institute TÜV Rheinland Group, proven to last up to 80% longer than a standard dustbag.

## Long reach

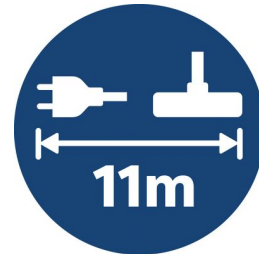

11 m reach allows you to clean a larger surface without having to switch the plug.

## 360Flex hose swivel



The Philips 360Flex hose swivel offers full 360 degrees of rotation of the hose for smooth maneuvering of the vacuum cleaner around your house.

## SmartLock coupling



The unique Philips SmartLock coupling on nozzles and the telescopic tube easily connects, and disconnects, these parts during cleaning. The SmartLock coupling intuitively allows you to adjust the telescopic tube to your preferred height.

## Extra long grip with air slide

This ergonomically shaped grip is convenient to use. Its extra long design gives you farther reach, so you can easily clean hard to reach places. The air slider allows you to adjust the suction power without having to bend down.

# Specifications

## Design

**Color:** Deep black

## Performance

**Airflow (max):** 51 l/s

**Input power (IEC):** 1800 W

**Input power (max):** 2200 W

**Noise level (Lc IEC):** 79 dB

**Suction power (max):** 500 W

**Vacuum (max):** 36 kPa

## Usability

**Tube type:** Metal 2-piece telescopic tube

**Handgrip:** Ergonomic grip with air slider

**Tube coupling:** SmartLock

**Carrying handle:** Top and front

**Dust full indicator**

**Park or storage assist:** Vertical and horizontal

**Power control:** Electronic on appliance

**Wheel type:** Rubber

**Action radius:** 11 m

**Cord length:** 8 m

## Filtration

**Dust bag type:** s-bag Ultra Long Performance

**Exhaust filter:** Ultra Clean Air HEPA 13 filter

**Motor filter:** Triple layer

**Dust capacity:** 5 L

**HEPA Air Seal**

## Nozzles and accessories

**Standard nozzle:** TriActive+ nozzle

**Accessories included:** Crevice tool, 2-in-1 brush/small nozzle

**Accessory storage:** On tubeclip

## Weight and dimensions

**Weight of product:** 5.0 kg

**Dimensions of product (LxWxH):** 500 x 310 x 300 mm

