

# PHILIPS

Steam generator  
iron

FastCare Compact

Max 5.2 bar pump pressure

Up to 300 g steam boost

1.5 L fixed water tank

GC6720/30



## Iron faster with 2x more steam\*

Powerful, continuous steam works faster than a steam iron, with an easy-to-refill water tank and quick heat-up. Compact and lightweight for easy storage.

### Compact & convenient

- Lightweight and compact for easy use and storage
- Automatic shut-off when the iron is left unattended
- Large tank for long use

### Fast & powerful

- Powerful steam for ultimate crease removal
- Calc-clean container included — no cartridges, no extra cost
- Ceramic soleplate for durability and easy gliding

# Highlights

## Ultra-powerful steam



Strong, continuous steam tackles even the thickest fabrics with ease. Watch stubborn creases melt away with an extra steam boost just where you need it. This extra steam is perfect for vertical steaming to refresh clothes and curtains, too.

## Smart descaling



Our built in descaling system, Smart Calc Clean reminds you when you need to descale. It includes a container to make descaling easy. This means no cartridges are required and no additional costs.

## Compact and convenient




The lightweight, compact size is perfect for storage and fits conveniently on your ironing board. Exclusive ProVelocity technology makes our steam generators smaller and more compact than ever.

## Ceramic soleplate



Our durable ceramic soleplate glides well on all garments. It's non-stick, scratch-resistant and simple to keep clean.

## Auto shut off

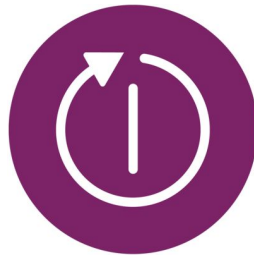

The automatic shut off function automatically switches off your steam generator iron if it has not been used for a few minutes. This saves energy and gives you peace of mind.

## 1.5 L water tank



A 1.5-liter transparent tank gives you more than 1 hour of continuous use. See clearly how much water is left and refill easily at any time under the tap through the large filling door.

# Specifications

## Technology

ProVelocity steam engine

## Fast crease removal

Continuous steam: Up to 120 g/min

Power: 2400 W

Pressure: Max 5.2 bar pump

Ready to use: 2 min

Steam boost: Up to 300 g

Steam-on-demand

Vertical steam

Voltage: 220-240 V

## Easy to use

Soleplate gliding performance: 3 stars

Soleplate name: Ceramic

Water tank capacity: 1500 ml

Hose length: 1.6 m

Power cord length: 1.65 m

Ready to use: Light indicator, Sound indicator

Refill any time during use

Soleplate scratch resistance: 3 stars

Tap water suitable

## Scale management

Descaling and cleaning: Smart Calc Clean

Descaling reminder: Light, Sound, no

cartridges needed, no extra

## Storage

Cord storage: Cord storage compartment

Hose storage: Hose storage compartment

## Accessories included

Calc clean container

## Size and weight

Packaging dimensions (WxHxL): 25 x 27 x 40 cm

Product dimensions (WxHxL): 21 x 23 x 35.4 cm

Total weight with packaging: 4.1 kg

Weight of iron: 1.25 kg

Weight of iron + base: 2.9 kg

## Guarantee

2 year worldwide guarantee

## Green efficiency

Product packaging: 100% recyclable

