

PHILIPS

Vacuum cleaner
with bag

Jewel

2000W

Parquet



FC9066/01



Beautiful results in a blink of an eye

TriActive nozzle with unique 3-in-1 action

The Jewel range is ideal for those who want beautiful results fast. It comes with the patented TriActive nozzle, which gives you three cleaning actions in one stroke.

Beautiful floors in a blink of an eye

- 2000 Watt motor generating max. 450 Watt suction power

Clean air in your home

- Super Clean Air HEPA 12 filter, 99.5% filtration

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Leaves a fresh and clean scent

- Active fragrance control dispenses a pleasant smell

Superior hard-floor cleaning

- Super Parquet nozzle removes 3 x more sticky dirt

Highlights

2000 Watt motor




Highly efficient 2000 Watt motor generates max. 450 Watt suction power for perfect cleaning results.

Super Clean Air HEPA 12 filter




This Super Clean Air HEPA 12 filter catches at least 99.5% of all harmful microscopic vermin that causes respiratory allergies.

Active fragrance control

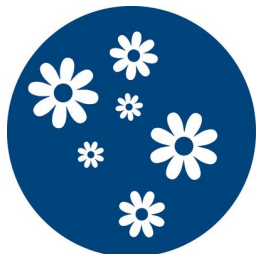

To give a special fresh clean smell, each Jewel comes with a fully integrated and adjustable active fragrance control. Scent granules are available in blossom scent (FC8025) and lemon scent (FC8026).

Super Parquet nozzle

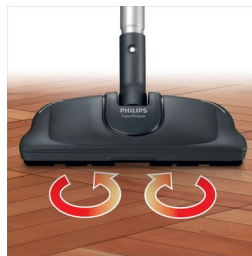

The Super Parquet nozzle allows you really clean hard floors of all kinds in one go, without the risk of harming them. Using the absorption capacity of the micro-fibre pads, together with the suction power of the vacuum cleaner, you achieve maximum result without requiring any detergents or brushes.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Specifications

Design

Color: Macaw green

Filtration

Dust bag type: s-bag

Exhaust filter: Super Clean Air HEPA 12 filter

Dust capacity: 3 L

Nozzles and accessories

Accessories included: Brush, Crevice tool, Small nozzle

Accessory storage: On handgrip

Additional nozzle: Super Parquet nozzle

Standard nozzle: TriActive nozzle

Performance

Airflow (max): 40.9 l/s

Input power (IEC): 1800 W

Input power (max): 1800 W

Noise level (Lc IEC): 76 dB

Suction power (max): 450 W

Vacuum (max): 32 kPa

Usability

Active fragrance control

Clean Comfort cassette

Tube coupling: Button

Dust full indicator

Power control: Electronic on appliance

Tube type: Metal lacquered 2-piece telescopic tube

Wheel type: Rubber

Action radius: 10 m

Cord length: 7 m

Weight and dimensions

Weight of product: 5.7 kg

