

PHILIPS

Saeco

Super-automatic
espresso machine

Xsmall

Classic Milk Frother

Silver



HD8745/01



Taste the aroma of your favourite coffee beans one-touch bean-to-cup espresso

Everything you need to embark on a never-ending aroma discovery

Authentic Italian coffee perfection

- Delicious milk froth thanks to the classic milk frother
- Coffee without burnt taste thanks to 100% ceramic grinders

Set the beverages to suit your taste

- Save your favourite coffee length
- Play with the coffee's richness with our adjustable grinders

Easy to clean and maintain

- Always a clean machine thanks to automatic circuit cleaning
- Easy cleaning thanks to removable brewing group

Highlights

Automatic circuit cleaning




Saeco designed this espresso machine to automatically clean its coffee circuit with water when the machine is started up or switched off. This delivers a great, fresh taste with each cup of coffee.

100% ceramic grinders



This espresso machine is equipped with 100% ceramic grinders. Saeco uses ceramic grinders because of their consistent grind without overheating the coffee bean, for an impeccable espresso. Ceramic also ensures long-lasting performance and totally silent operation.

Saves your coffee length

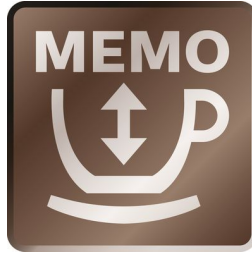

You will always get a perfect cup of espresso brewed according to your personal preference thanks to our memo function, which allows you to adjust the coffee length to suit your taste. Enjoy a superb coffee drink at the touch of a button.

Classic milk frother




This Saeco espresso machine comes with the classic milk frother, which baristas call "Pannarello". It dispenses steam and needs to be immersed in the milk to prepare gorgeous milk foam. Unleash your inner barista by preparing your delicious milk specialities the traditional way!

5-step adjustable grinders



Different coffee blends require different levels of granularity for the full flavour to unfold. The grind granularity of this espresso machine can be adjusted in 5 settings, from the finest grind, for a full-bodied espresso, to the coarsest, for a lighter café crème.

Removable brewing group

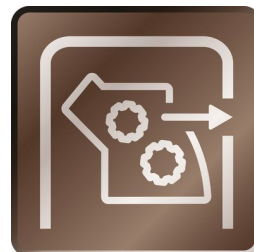

The brewing group, a Saeco invention, is the heart of our espresso machines, ensuring automation. The brewing group is, depending on the model, easily accessible from the front or side. It can be removed effortlessly for easy cleaning by rinsing under the tap, ensuring maximum hygiene.

Specifications

Perfect Espresso

Espresso technology: Aroma-system: pre-brewing

Easy to use

Cleaning and maintenance: Automatic coffee circuit rinse

Usage: Removable brewing group, Removable water tank

Technical data

Boiler: Stainless steel

Frequency: 50 Hz

Power: 1400 W

Voltage: 230 V

Pump Pressure: 15 Bar

Weight and dimensions

Maximum cup height: 95 mm

Product dimensions (L x D x H):
420 x 325 x 295 mm

Coffee bean capacity: 180 gr

Dump box capacity: 8 servings

Water tank capacity: 1 l

