

# PHILIPS

Steam generator  
iron

PerfectCare Aqua  
Pro

Max 6.7 bar pressure

Up to 450g steam boost

2.5 L water tank capacity

Ultra-light iron

GC9410/66



## Super powerful ironing

with Ultra-light iron

PerfectCare Aqua Pro comes with our ultra-light iron and extra large 2.5 L watertank, ideal for long ironing sessions and perfect vertical steaming.

### **No temperature setting needed, guaranteed no burn**

- Iron jeans to silk, no need to change temperature setting
- Safe to leave the hot soleplate on the ironing board

### **Fast ironing with continuous powerful steam**

- Powerful steam for ultimate crease removal
- Easy and efficient descaling system
- Philips best gliding and most scratch resistant soleplate
- Save energy with ECO mode

### **Ultimate ironing experience**

- Enjoy powerful ironing with minimum noise
- Light weight and comfortable to handle
- Extra-large water tank for longer continuous use
- Safe and secure carry lock
- Automatic switch off for safety and energy saving

# Highlights

## OptimalTEMP technology



With OptimalTEMP technology you'll no longer have to waste time changing temperature settings, waiting for the temperature to adjust or pre-sorting clothes. Iron fabrics from jeans to silk, with guaranteed no burns thanks to the perfect combination of temperature and continuous powerful steam.

## Safe rest



Innovative OptimalTEMP technology guarantees no burn on all ironable fabrics. As well as the reassurance this provides whilst ironing, it also means you can leave the hot iron soleplate directly on your cotton ironing board without causing any damage. This helps to reduce any discomfort to your wrists, as you won't need to lift the iron to and from its base as often.

## Ultra powerful steam



An ultra-fast ironing experience can be yours with revolutionary technology. The powerful and continuous steam tackles even rough

creases, and thicker fabrics are smoothed out with ease and speed. Plus there's an extra steam boost if needed, perfect for vertical steaming or stubborn creases.

## Easy De-Calc




Regular descaling protects your iron and ensures you'll continue to get the very best steam performance. The exclusively designed and ideally positioned Easy De-Calc Plus function provides the ideal way to get rid of lime scale and extend the lifespan of your steam generator iron. The iron will remind you with both light and sound when it's time to clean and descale. Then when your appliance is cold, simply remove the Easy De-Calc knob, collect the dirty water and scale into a cup and discard.

## T-ionicGlide soleplate



The T-ionic Glide is Philips' most premium soleplate, promising superior gliding for more effortless and fast ironing. It has a stainless steel base which is harder and more durable than aluminum, with an integrated titanium oxide layer for advanced scratch resistance. Plus the carefully designed shape and vents provide an even better steam distribution for faster crease removal.

## Energy saving

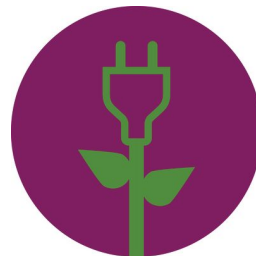

ECO mode allows you to save energy without compromising your ironing results. The ECO mode uses a reduced amount of steam, but still a sufficient amount to iron all your garments.

## Silent steam technology



Powerful steam doesn't have to mean noisy ironing. Enjoy ironing with family around, whilst watching TV or when listening to music, without being disturbed by the noise. The steam generator is fitted with silencing steam filters to minimize noise of steam and a sound-absorbing platform to reduce the vibration noise in the base

# Specifications

## Technology

Cyclonic steam chamber  
For all ironable fabrics  
No burns  
No temperature settings needed  
OptimalTEMP technology  
Silent steam Technology  
Smart Control Processor

## Fast crease removal

Continuous steam: Up to 120 g/min  
Power: Max 2100 W  
Pressure: Max 6.7 bar  
Ready to use: 2 min  
Steam boost: Up to 450 g  
Steam-on-demand  
Variable steam levels  
Vertical steam  
Voltage: 220 - 240 V

## Easy to use

Safe on all ironable fabrics: Even delicates like silk  
Soleplate gliding performance: 5 stars  
Soleplate name: T-ionicGlide  
Water tank capacity: 2500 ml  
Cord freedom (swivel): 360 degree cord freedom  
Hose length: 1.7 m  
Power cord length: 1.8 m  
Precision steam tip  
Ready to use: Light indicator  
Refill any time during use  
Safety auto off  
Soleplate scratch resistance: 5 stars  
Tap water suitable  
Heat up time: 2 min  
Extra large filling hole

## Scale management

Descaling and cleaning: Easy De-calc  
Descaling reminder: Light, Yes

## Storage

Carry lock: For transportation and safety  
Cord storage: Velcro fix  
Hose storage: Hose storage compartment

## Size and weight

Product dimensions (WxHxL): 36.2 x 27 x 26.3 cm  
Weight of iron: 0.8 kg  
Weight of iron + base: 4.2 kg

## Guarantee

2 year worldwide guarantee

## Green efficiency

Energy saving mode  
Product packaging: 100% recycable  
User manual: 100% recycled paper

