




Saeco GranBaristo Super-automatic espresso machine

- Brews 18 coffee varieties
- Integrated milk jug and frother
- Black
- 5-step adjustable grinder

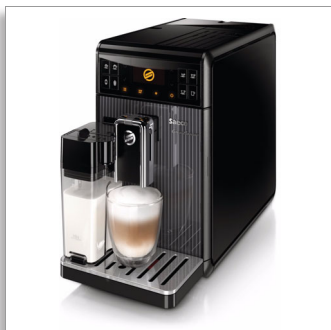

HD8964/08

Enjoy a unique variety of 16 one-touch specialities

With the first one-finger removable brewing group

After 28 years, Saeco has reinvented the bean-to-cup experience, crafting the new GranBaristo. A sleek espresso machine with a set of revolutionary technologies that brews faster and hotter, offers more variety and streamlines maintenance

Authentic Italian coffee perfection

- Perfect froth thanks to the dual-chamber milk carafe
- Perfect coffee in no time thanks to the thermo-speed boiler
- Coffee without burnt taste thanks to 100% ceramic grinders
- Variety of 18 different delicious special drinks

Set the beverages to suit your taste

- Play with 6 settings of coffee intensity
- Personalise your coffee in 6 user profiles
- Play with the coffee's richness with our adjustable grinders

Easy to clean and maintain

- Always a clean machine thanks to auto-clean and descaling
- No-fuss coffee experience thanks to low water consumption
- Keep a clean machine with a single finger
- Easy cleaning thanks to dishwasher-safe parts

PHILIPS

Saeco, a Philips brand

Highlights

100% ceramic grinders



This espresso machine is equipped with 100% ceramic grinders. Saeco uses ceramic grinders because of their consistent grind without overheating the coffee bean, for an impeccable espresso. Ceramic also ensures long-lasting performance and totally silent operation.

Patented dual-chamber carafe



Enjoy your milk specialties fully automated with the new patented milk carafe with dual-chamber technology. Simply pour milk into the carafe, plug it into the machine and select your coffee drink. With the dual-chamber technology you will always enjoy professional coffee drinks with dense, long-lasting milk froth at the ideal temperature from a constant splash-free flow of milk.

Dishwasher-safe parts



For your convenience, you can put the Saeco's drip tray and milk frother or milk carafe in the dishwasher. This will save time and ensure a hygienic clean.

18 coffee specialties



From a creamy cappuccino to a regular coffee, savour a world of 18 different drinks due to Saeco's VariPresso brewing group chamber. It will automatically adjust the pressure, adapting to suit many types of coffee extraction for a great coffee variety at home.

Thermo-speed technology boiler



Enjoy perfectly hot, professional-quality coffee without the wait, thanks to our powerful new

boiler with Saeco Thermo-speed technology. The Thermo-speed technology will flash-heat the coffee circuit when the machine is turned on and prevent heat loss, ensuring perfect, hot coffee from the very first cup.

No-fuss coffee experience



The new cutting-edge brewing group in this espresso machine was designed to reduce the water consumption of its rinse cycle by up to 80%. This means you can now prepare more coffee drinks without having to refill the water tank.



Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas — Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Technical specifications

- Boiler material: Stainless steel (Inox)
- Pump pressure: 15
- Number of water boilers: 1 boiler
- Water pressure in pump: 15 bar (perfect espresso)
- Supported coffee types: Ground coffee, Whole coffee beans
- Country of origin: Made in Italy, Designed in Italy
- Removable brewing group
- Power: 1900 W
- Voltage: 240 V
- Frequency: 50 Hz
- Cord length: 80 cm

Perfect Espresso

- Espresso technology: Aroma-system: pre-brewing

Service

- 2-year worldwide guarantee

Multi-Beverage

- Milk Variations: Integrated auto milk function, Milk

quantity selector, Removable milk carafe

Easy to use

- Usage: Adjustable coffee dispenser, Bypass for grinded coffee, Cup-holding surface, Removable brewing group, Removable water tank

Weight and dimensions

- Product weight: 13 kg
- Product dimensions (L x D x H): 205 x 460 x 360 mm
- Coffee bean capacity: 270 gr
- Waste container capacity: up to 20 servings
- Milk carafe capacity: 0.5 l
- Water tank capacity: 1.7 l
- Maximum cup height: 165 mm

Design

- Colour: Black/Grey
- Materials and finishing: ABS Thermoplastic