

PHILIPS

Saeco

Super-automatic
espresso machine

Syntia

Classic Milk Frother

Stainless steel



HD8837/01



Live the pleasure of Italian espresso at home compact and stylish bean-to-cup system

the perfect synthesis between compactness, performance, design and premium materials

Authentic Italian coffee perfection

- Delicious milk froth thanks to the classic milk frother
- Coffee without waiting thanks to the quick heat boiler
- Coffee without burnt taste thanks to 100% ceramic grinders

Set the beverages to suit your taste

- Save your favorite coffee settings
- Play with the coffee's richness with our adjustable grinders
- Avoid heat loss and fit every cup with our adjustable spout

Ease of cleaning and maintaining

- Always a clean machine thanks to auto-clean and descaling
- Easy cleaning thanks to removable brewing group
- Easy cleaning thanks to dishwasher-safe parts
- Cutting-edge design with stainless steel finish

Highlights

Stainless steel



The cutting-edge design of your Saeco espresso machine is rounded off by the stainless steel finish. The stainless steel provides a high quality look and will be a highlight on your kitchen counter tops. It also gives greater resistance for a long-lasting performance.

100% ceramic grinders



This espresso machine is equipped 100% ceramic grinders. Saeco uses ceramic grinders because of their consistent grind without overheating the coffee bean for an impeccable espresso. Ceramic also ensures long-lasting performance and a totally silent operation.

Quick heat boiler



The Saeco quick heat boiler technology ensures your machine is always ready. Now you won't have to wait between brewing each espresso, but can prepare coffee after coffee.

Classic milk frother



This Saeco espresso machine comes with the classic milk frother that baristas call a "Pannarello". It dispenses steam and is immersed in milk to prepare gorgeous milk foam. Unleash your inner barista by preparing your delicious milk specialties the traditional way!

Saves your coffee settings



You will always get a perfect cup of espresso brewed just for you, according to your personal preference, thanks to our innovative memo function to adjust the coffee length, strength and temperature. Enjoy a superb coffee drink in your favorite cup with just the press of a button.

Adjustable spout



The adjustable spout on our espresso machines will fit every cup and thus prevents the coffee splashing or cooling down while pouring in your cup. This way your espresso is always served at the right temperature while maintaining a clean machine.

Dishwasher-safe parts




For your convenience, you can put the Saeco's drip tray and milk frother or milk carafe in the dishwasher. This will save time and ensure a hygienic cleaning.

5 step adjustable grinders



Different coffee blends require different levels of granularity for the full flavor to unfold. The grind granularity of this espresso machine can be adjusted in 5 settings, from the finest grind, for a full bodied espresso, to the coarsest, for a lighter coffee.

Removable brewing group

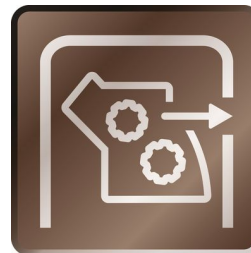

The brewing group, a Saeco invention, is the heart of our espresso machines, ensuring automation. The brewing group is, depending on the model, easily accessible from the front or side. It can be removed effortlessly for easily cleaning by rinsing under the tap ensuring maximum hygiene.

Specifications

Technical specifications

Boiler material: Stainless steel (Inox)

Number of water boilers: 1 boiler

Water pressure in pump: 15 bar (perfect espresso)

Supported coffee types: Ground coffee, Whole coffee beans

Country of origin: Made in Italy, Designed in Italy

Removable brewing group

Power: 1400 W

Voltage: 230 V

Frequency: 50 Hz

Cord length: 80 cm

Perfect Espresso

Espresso technology: Saeco adapting system, Aroma-system: pre-brewing

Service

2-year worldwide guarantee

Multi-Beverage

Milk Variations: Pannarello: milk frothing

Easy to use

Cleaning and maintenance: Automatic coffee circuit rinse

Usage: Adjustable coffee dispenser, Bypass for

grinded coffee, Frontal access to all function, Rapid steam, Removable brewing group, Removable watertank

Weight and dimensions

Maximum cup height: 110 mm

Product weight: 8.9 kg

Product dimensions (L x D x H): 256 x 315 x 415 mm

Coffee bean capacity: 250 gr

Waste container capacity: 8 servings

Water tank capacity: 1.2 L

