

# PHILIPS

Bagless vacuum cleaner

PowerPro Active

2000 W

PowerCyclone 4

Multi Clean nozzle

Long reach tool



FC8671/71



## High suction power with PowerCyclone 4

### Quick and easy emptying

The new Philips PowerPro Active bagless vacuum cleaner delivers high cleaning performance, thanks to PowerCyclone technology and Multi Clean nozzle, engineered to maximize dust pick-up. The dust container is easy to empty, with no dust cloud.

#### Remarkable cleaning results

- PowerCyclone 4 technology separates dust and air in one go
- 2000 W motor for strong suction power
- New Multi Clean nozzle for thorough cleaning on all floors

#### Clean air filter system

- EPA10 filter system with AirSeal for healthy air

#### Effortless cleaning

- Long reach tool for difficult to access areas
- ActiveLock couplings to easily adjust to each cleaning task
- Reach all corners thanks to the extra long ergonomic grip
- Soft brush integrated into handle, always ready to use
- Variable power setting


# Highlights

## EPA10 Clean air system




EPA10 filter and AirSeal capture the finest dust before the air is blown out for a dust-free environment and clean, healthy air.

## Long reach tool

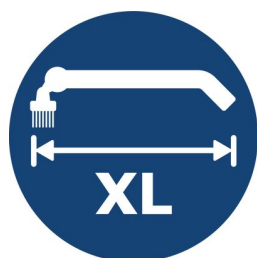

The Long reach tool is a clever accessory which helps you clean difficult areas like the top of the furniture or high shelves. The angle of the brush is adjustable, so you can have the exact instrument for your needs.

## Power control

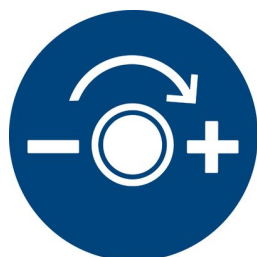


The variable power setting allows you to select the optimal level of suction for the different types of surfaces you vacuum.

## PowerCyclone 4 Technology



PowerCyclone 4 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber to separate the dust from the air.

## Extra long ergonomic grip

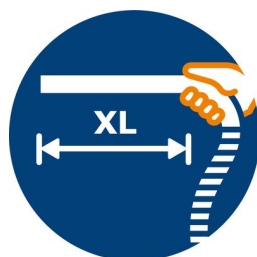


This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

## 2000 Watt motor



2000 W motor generates strong suction power for excellent cleaning results.

## ActiveLock couplings

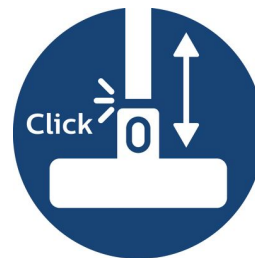

The ActiveLock couplings allow you to easily connect and disconnect the different nozzles and accessories from the telescopic tube while cleaning.

## Integrated soft brush



The vacuum cleaner is designed with a soft dusting brush, which is conveniently integrated in the handle of the appliance, always ready to use.

## Multi Clean nozzle



The new Multi Clean nozzle delivers a thorough cleaning on all types of floors. The nozzle is designed to seal closely to the floor to ensure a good pick-up of even the fine dust.

# Specifications

## Performance

Airflow (max): 37 l/s  
Input power (IEC): 1800 W  
Input power (max): 2000 W  
Sound power level: 80 dB  
Suction power (max): 370 W  
Vacuum (max): 33 kPa

## Usability

Action radius: 9 m  
Carrying handle: Top and front  
Tube type: Metal 2-piece telescopic tube  
Wheel type: Rubber  
Tube coupling: ActiveLock  
Power control: Electronic on appliance

## Design

Color: Full red

## Filtration

Dust capacity: 1.7 L  
Exhaust filter: Microfilter  
Motor filter: EPA 10 washable filter

## Nozzles and accessories

Accessories included: Crevice tool, Integrated brush  
Accessory storage: On tubeclip  
Extra accessories: Long reach tool  
Standard nozzle: Multi Clean nozzle

## Sustainability

Packaging: > 90% recycled materials  
User manual: 100% recycled paper

## Weight and dimensions

Dimensions of product (LxWxH): 473 x 304 x 301 mm  
Weight of product: 6 kg

