

PHILIPS

Steam generator
iron

PerfectCare
Performer

Max 6 bar pump pressure

Up to 360 g steam boost

1.8 l water tank capacity
with detachable water tank



GC8712/20



Ultra-fast ironing with powerful continuous steam

The Philips PerfectCare Performer steam generator iron ensures a truly simple, powerful and burn-free ironing experience. The powerful continuous steam penetrates deeply and continuously into the fibre to remove creases easily.

No temperature setting needed; no burning, guaranteed

- Go from ironing jeans to silk; no need to change temperature setting
- Safe to leave the hot soleplate on the ironing board
- Tested and approved by independent textile experts

Fast ironing with continuous powerful steam

- Powerful steam for ultimate crease removal
- Integrated easy-clean system for long-lasting performance
- Philips' best gliding with increased scratch resistance
- Save energy with ECO mode

Extra convenience

- Lightweight steam generator for easier handling
- Large detachable water tank for easy refilling
- Safe and secure carry lock

Highlights

OptimalTEMP technology



With OptimalTEMP technology you'll no longer have to waste time changing temperature settings, waiting for the temperature to adjust or pre-sorting clothes. Iron all fabrics, from jeans to silk, with no burning guaranteed thanks to the perfect combination of temperature and continuous powerful steam.

Safe rest



Innovative OptimalTEMP technology guarantees no burning on any ironable fabric. As well as the reassurance this provides whilst ironing, it also means you can leave the hot iron soleplate directly on your cotton ironing board without causing any damage. This helps to reduce any discomfort to your wrists, as you won't need to lift the iron to and from its base as often.

Tested and approved



This iron is tested and approved by independent textile expert institutes, such as DWI, IWTO and Woolmark, for its excellent

ironing performance. The Woolmark Apparel Care programme helps consumers to identify quality laundry products that are approved by The Woolmark Company for use on wool products. Philips, with its exclusive OptimalTEMP technology, is so far the only ironing brand to be certified with the Gold standard from Woolmark. You can be confident that our Woolmark-approved apparel care products are ideal for any wool garments.

Ultra-powerful steam



An ultra-fast ironing experience can be yours with revolutionary technology. The powerful and continuous steam tackles even tough creases, and thicker fabrics are smoothed out with ease and speed. Plus there's an extra steam boost if needed, perfect for vertical steaming or stubborn creases.

Smart Calc clean



Regular descaling protects your iron and maintains steam performance. The Smart Calc-Clean system is an integrated descaling and cleaning function to extend the lifespan of your steam generator iron. The iron will remind you with both light and sound that cleaning and descaling is needed. Simply place your iron onto the Smart Calc-Clean container and start the process. It takes approx. 2 minutes for the


dirty water and scale to be collected; your steam generator will beep once it's finished and ready to use again.

SteamGlide Plus soleplate



The SteamGlide Plus soleplate is durable and non-stick because of the ceramic finishing. It has an integrated titanium oxide layer for superior gliding performance.

Energy saving

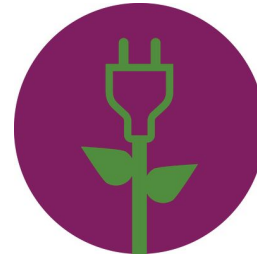

ECO mode allows you to save energy without compromising your ironing results. The ECO mode uses a reduced amount of steam, but still a sufficient amount to iron all your garments.

Lightweight steam generator



Thanks to revolutionary ProVelocity technology, we've been able to make a powerful steam generator iron that is much lighter than traditional models. This means it's more stable when positioned on your ironing board and carrying it around is much easier.

Specifications

Technology

For all ironable fabrics
No burn
OptimalTEMP Technology
ProVelocity steam engine
Smart Control Processor

Fast crease removal

Continuous steam: Up to 120 g/min
Power: 2600 W
Pressure: Max 6 bar pump
Ready to use: 2 min
Steam boost: Up to 360 g
Steam-on-demand
Variable steam levels
Vertical steam

Easy to use

Safe on all ironable fabrics: Even delicates like silk
Soleplate gliding performance: 5 stars

Soleplate name: SteamGlide Plus
Detachable water tank
Hose length: 1.6 m
Power cord length: 1.8 m
Precision steam tip
Ready to use: Light indicator, Sound indicator
Refill anytime during use
Soleplate scratch resistance: 4 stars

Scale management

Descaling and cleaning: Smart Calc Clean
Descaling reminder: Light, Sound, Yes

Storage

Carry lock: For transportation and safety
Cord storage: Velcro fix, Yes
Hose storage: Hose storage compartment

Size and weight

Packaging dimensions (W x H x D): 24.6 x 33.5 x 44.9 cm
Product dimensions (W x H x D): 22 x 24 x 37 cm
Weight of iron: 1.22 kg
Weight of iron + base: 3.2 kg

Guarantee

2 year worldwide guarantee

Green efficiency

Energy saving mode
Product packaging: 100% recyclable
User manual: 100% recycled paper

