

# PHILIPS

Vacuum cleaner  
with bag

Performer Compact

2000 W

Super Clean Air filter

3L



FC8383/61



## Full performance, high suction power

Compact yet powerful with AirflowMax technology

The new Philips Performer Compact vacuum cleaner delivers top cleaning performance with minimum effort. AirflowMax technology keeps the suction power stronger for longer. The ExtraClean nozzle removes dust efficiently on all floors.

### Remarkable cleaning results

- 2000 W motor for strong suction power
- Revolutionary AirflowMax technology for strong suction power
- New ExtraClean nozzle for thorough cleaning on all floors

### Clean air filter system

- S-bag Classic Long Performance lasts up to 50% longer
- Super Clean Air filter captures >99% of particles

### Effortless cleaning

- ActiveLock couplings to easily adjust to each cleaning task
- Compact and light for effortless cleaning and easy storage
- On-board accessories for ultimate convenience



reddot award 2016  
winner

# Highlights

## S-bag Classic Long Performance



This new Philips synthetic dust bag has been developed to provide long lasting vacuum cleaner performance, i.e. a high level of suction power and maximum filtration, up to the moment the dust bag is full and ready for disposal.

## 2000 Watt motor



2000 W motor generates strong suction power for excellent cleaning results.

## ActiveLock couplings




The ActiveLock couplings allow you to easily connect and disconnect the different nozzles and accessories from the telescopic tube while cleaning.

## AirflowMax technology



The unique AirflowMax technology keeps the suction power stronger for longer\* to use the bag to the very end. The technology is build around the optimization of three key elements: 1) Unique ribs profile inside the dust chamber to maximize airflow around the dustbag and enable the use of the entire bag surface. 2) Specially designed dust chamber capacity that allows the dustbag to fully unfold uniformly. 3) High quality, non-clogging fibre structures in the dustbag absorb dust without blocking the pores, thus avoiding a reduction in suction power.

## Compact and lightweight

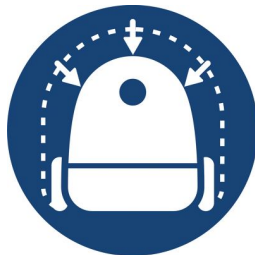


Thanks to its small size, the appliance can be easily stored, saving valuable space. The light weight makes it easy to carry around.

## On-board accessories

The vacuum cleaner is designed with integrated accessories, so that you do not need to carry extra pieces around while you clean. The crevice tool is located on the canister, always ready to use.

## Super Clean Air filter

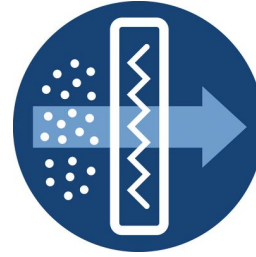

The Super Clean Air filter captures >99% of harmful particles such as pollen, dust mites or pet hair. So you can enjoy clean healthy air in your home!



## IF DESIGN AWARD

Award-winning products are selected by the top names in design. Each year, iF International Forum Design GmbH organizes one of the world's most celebrated and valued design competitions: the iF DESIGN AWARD. Recognized as a symbol of design excellence around the world, the iF DESIGN AWARD welcomes over 5,000 submissions from 70 countries every year.



reddot award 2016  
winner

## RED DOT DESIGN AWARD 2016

The Red Dot Design Award is an international product design and communication design prize. Winning an award in this competition is proof that the creative minds have a vision and are able to commit, to carry out, to research and to experiment - and that they are a name to watch out for in the future. There are prize categories for product design, design agencies, and design concepts.

# Specifications

## Performance

Input power (IEC): 1800 W  
Input power (max): 2000 W  
Sound power level: 83 dB  
Suction power (max): 375 W  
Vacuum (max): 23,5 kPa

## Usability

Action radius: 8 m  
Carrying handle: Front  
Cord length: 5 m

Tube type: Metal 2-piece telescopic tube  
Wheel type: Rubber  
Tube coupling: ActiveLock

## Design

Color: Deep Black

## Filtration

Dust bag type: s-bag Classic Long Performance  
Dust capacity: 3 L  
Exhaust filter: Super Clean Air filter  
Motor filter: 1 layer foam filter

## Nozzles and accessories

Accessories included: Crevice tool, Integrated brush  
Standard nozzle: ExtraClean nozzle

## Sustainability

Packaging: > 90% recycled materials  
User manual: 100% recycled paper

## Weight and dimensions

Dimensions of product (LxWxH): 400 x 282 x 251 mm  
Weight of product: 4.5 kg

