

PHILIPS

Pressurised steam generator

InstantCare

5.2 bar

ECO

240 g steam boost



GC7480/02



Fast and powerful ironing

Iron with 2-min quick start, refill any time

Created to speed up ironing from start to finish, the Philips InstantCare steam iron is ready to use in 2 minutes. The power of the pressurised steam speeds up ironing by penetrating deeper into the fabrics to remove the creases.

Fast and powerful ironing

- Continuous steam up to 120 g/min
- Steam boost up to 240 g for tough wrinkle removal
- Up to 5.2 bars of steam pressure

Comfortable ironing

- SteamGlide soleplate is Philips premium soleplate
- Lightweight iron for effortless ironing
- Iron switches off automatically when left unattended

Easy to use

- Start quickly: less than 2 minutes start-up time
- Refill the water tank at any time, even during ironing
- Permanent anti-calc tablets inside delay scale build up
- Save 30% energy and 40% water consumption

Highlights

Continuous steam up to 120 g/m




The Philips iron has a continuous steam output of up to 120 g/min thanks to the small amounts of water that are pumped into the boiler each time. For perfect and fast crease removal.

SteamGlide soleplate




The SteamGlide soleplate is the best Philips soleplate for your steam iron. It has great scratch resistance, glides excellently and is easy to clean.

Anti-calc Tablets

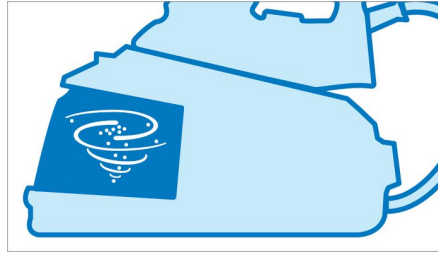

Permanent anti-calc tablets delay the formation of scale build up ensuring better protection for your system iron

Quick start: < 2 minutes

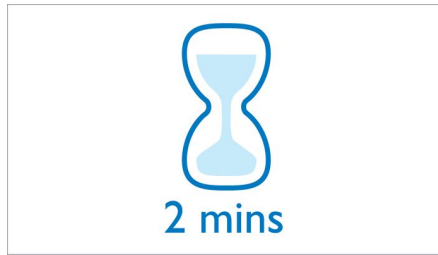

This system iron is ready to use in less than 2 minutes.

ECO setting

ECO

Save 30% energy and 40% water consumption by selecting the eco-setting. The eco-setting offers the most energy efficient way to obtain perfect ironing results.

Refill the water tank any time



The separate water tank allows you to re-fill the water tank any time, even during ironing, without waiting.

Steam boost up to 240 g

The iron's 240 g steam boost enables you to easily remove even the most stubborn creases.

Up to 5.2 bar

Double your ironing speed with pressurised steam. Pressurised steam penetrates deep into fabrics, making your ironing fast and easy, even on difficult fabrics.

Specifications

Fast and powerful crease removal

Soleplate: SteamGlide
Continuous steam output: 120 g/min
Steam boost: 240 g
Vertical steam
Steam pressure: Up to 5.2 Bar
Variable steam settings
Steam tip
Power: 2400 W

Easy to use

Water tank capacity: 1000 ml
Filling and emptying water: Extra large filling hole

Refill any time

Heat-up time: 2 min
Safety auto off
Hose storage: Hose clip
Power cord length: 1.8 m
Cord freedom (swivel): 180 degree cord freedom
Hose length: 1.7 m

Sustainability

ECO setting
Energy saving: 30% energy reduction

Calc management

Calc clean solution: Anti-calc tablets and rinsing

Technical specifications

Voltage: 220 - 240 V
Product dimensions: 42.9 x 40 x 20.6 cm
Weight of iron: 1.2 kg
Weight of iron + base: 4.5 kg

