

# PHILIPS

Vacuum cleaner  
with bag

Performer

1250W

375W suction power

HEPA 13 filter

FC9179/03



## Greener every day

Save 35% energy with highly efficient HD motor\*

The highest suction power ever, resulting in effortless cleaning: this is what the Philips Performer vacuum cleaner FC9179/03 is all about. The new highly efficient HD motor uses up to 35% less energy, while keeping the suction power.

### Low power consumption, high-power results

- New 1250 Watt HD motor generates max. 375 Watt suction power

### Less waste in the environment

- At least 50% of plastics is sustainable

### Long lasting dust pickup

- s-bag Ultra Long Performance for top cleaning results

### Highly efficient anti-allergy system

- HEPA AirSeal plus HEPA 13 filter
- ECARF Seal of Quality for trusted results

### Superior results on all floors

- Test winning multi-nozzle for thorough & gentle cleaning




[asimpleswitch.com](http://asimpleswitch.com)



[asimpleswitch.com](http://asimpleswitch.com)

# Highlights

## New 1250 Watt HD motor

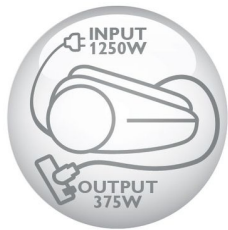

Highly efficient 1250 Watt HD (High Density) motor generates 375 Watt max. suction power, which means that you use 35% less energy without giving in on the cleaning result.

## Use of sustainable materials



At least 50% of plastics are produced from bio based or recycled material. Biobased means that the plastic is made out of non-eatable organic materials instead of scarce resources like oil.

## HEPA AirSeal, HEPA 13 filter



This Philips vacuum cleaner has been designed in such a way that all the air taken in is passed through the washable HEPA 13 filter (99.95% filtration) before it is exhausted. No escape is possible.

## Multi nozzle



Superior cleaning on all floor types thanks to this consumer test winning multi-nozzle. Its wide air channel is designed for optimal airflow, providing effective cleaning even alongside walls. Its special double hinge ensures permanent contact with the floor for best cleaning results. Designed and produced in Germany by WesselWerk, this high quality nozzle has a metal soleplate with surrounding brushes that gently and thoroughly clean hard floors, crevices and carpets.

## s-bag Ultra Long Performance



Maintain high cleaning performance for longer, thanks to the XXL 5 liter s-bag Ultra Long Performance. Made of premium, multilayer, non-clogging material, the s-bag Ultra Long Performance guarantees excellent suction power and filtration, lasting up to 80% longer than the standard dust bag.

# Specifications

## Design

Color: Deep black

## Filtration

Dust bag type: s-bag Ultra Long Performance

Exhaust filter: Ultra Clean Air HEPA 13 filter

Dust capacity: 5 L

HEPA Air Seal

## Nozzles and accessories

Accessories included: Crevice tool, Small nozzle

Standard nozzle: Multi nozzle

## Performance

Airflow (max): 39 l/s

Input power (IEC): 1250 W

Input power (max): 1250 W

Noise level (Lc IEC): 76 dB

Suction power (max): 375 W

Vacuum (max): 28 kPa

## Usability

Carrying handle: Top and front

Clean Comfort cassette

Tube coupling: Easy release

Dust full indicator

Tube type: Metal 2-piece telescopic tube

Wheel type: Rubber

Action radius: 10 m

Cord length: 7 m

## Weight and dimensions

Weight of product: 6.5 kg

Dimensions of product (LxWxH): 500 x 320 x 280 mm



[asimpleswitch.com](https://www.asimpleswitch.com)

## Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

