

# PHILIPS

Bagless vacuum cleaner

Marathon

AutoClean

AnimalCare

RemoteControl



FC9229



## Performs better for longer

Self-cleaning filter, no bag required

### Optimal cleaning power every time

- AutoClean filter optimises suction power

### Cleaning perfection

- 2000 Watt motor generating max. 400 Watt suction power

### Easy cleaning even around furniture

- Tri-active nozzle with unique 3-in-1 action

### Traps dust and allergens inside


- Ultra Clean Air HEPA 13 filter, 99.95% filtration

### Suction power control at your fingertips

- Handy remote control to change the suction power


# Highlights

## AutoClean filter

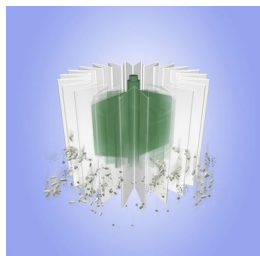

After every cleaning job, a simple push of a button will activate a rattle that thoroughly shakes the dust from the filter pleats into the dust bucket. Now the airflow is no longer blocked by the dust in the filter and suction power is almost like new.

## 2000 Watt motor

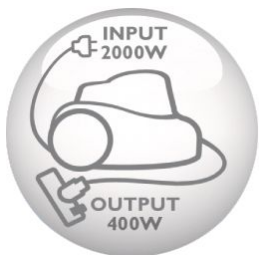

This vacuum cleaner has a 2000 Watt motor generating max. 400 Watt suction power for the ultimate cleaning perfection.

## Tri-active nozzle

This unique nozzle is aerodynamically designed for maximum cleaning efficiency, has side brushes to remove dust from corners and

curves, and has a front opening to pick up the big bits. Each stroke will deliver an immediate clean result.

## Handy remote control



Handy remote control to change the suction power with your fingertips and without bending.

## Turbo Brush nozzle



The Turbo Brush nozzle allows deep cleaning of carpets and quick hair and fluff removal from carpets. The rotating brush actively removes small dust particles and hairs, resulting in a 25% better cleaning performance on carpets. The wheels of the nozzle prevent damage during use on hard floors.

# Specifications

## Design

**Colour:** Emperor red

## Filtration

**Dust capacity:** 1.5 l

**Exhaust filter:** Ultra Clean Air HEPA 13 filter

## Nozzles and accessories

**Accessories:** Crevice tool, Small nozzle

**Accessory storage:** On handgrip

**Additional nozzle:** Turbo brush

**Standard nozzle:** TriActive nozzle

## Performance

**Airflow (max):** 37 l/s

**Input power (IEC):** 1800 W

**Input power (max):** 2000 W

**Noise level (Lc IEC):** 78 dB

**Suction power (max):** 400 W

**Vacuum (max):** 33 kPa

## Usability

**Action radius:** 12 m

**Carrying handle:** Top and front

**Cord length:** 9 m

**Tube coupling:** Button

**Special features:** Remote control (Infra-red)

**Tube type:** Metal lacquered 2-piece telescopic tube

**Wheel type:** Rubber

## Weight and dimensions

**Weight of product:** 7.5 kg

