

PHILIPS

Vacuum cleaner
with bag

Performer Active

AirflowMax technology

TriActive+ nozzle



FC8523/09



Full performance

Less energy consumption

The new Philips Performer Active delivers full cleaning performance thanks to the AirflowMax technology and the unique TriActive+ nozzle, engineered for high dust removal.

Remarkable cleaning results

- Revolutionary AirflowMax technology for extreme performance
- New 3-in-1 TriActive+ nozzle picks up coarse and fine dust

Maximum convenience

- 4L dust capacity for longer cleaning
- Variable power setting
- Reach all corners thanks to the extra long ergonomic grip

Clean air filter system

- EPA10 filter system with AirSeal for healthy air
- S-bag Classic Long Performance lasts up to 50% longer



asimpleswitch.com

Highlights

AirflowMax technology



AirflowMax technology maximizes the airflow, allowing the dustbag to unfold uniformly, so you get high performance, even as the bag fills-up!

TriActive+ nozzle




The TriActive+ nozzle applies 3 cleaning actions in one go: 1) It gently opens the carpet with its specially designed soleplate to remove the dust deep down. 2) It sucks up big bits with its larger opening at the front. 3) It sweeps up the dust and dirt alongside furniture and walls with its two side brushes.

4L dust capacity



The specially designed 4L dust chamber allows you to make optimal use of your dust bag, so you can clean for longer.

Power control

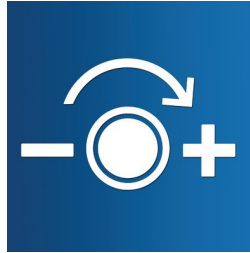

The variable power setting allows you to select the optimal level of suction for the different types of surfaces you vacuum.

Extra long ergonomic grip



This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

EPA10 Clean air system



EPA10 filter and AirSeal capture the finest dust before the air is blown out for a dust-free environment and clean, healthy air.

S-bag Classic Long Performance



This new Philips synthetic dust bag has been developed to provide long lasting vacuum cleaner performance, i.e. a high level of suction power and maximum filtration, up to the moment the dust bag is full and ready for disposal.



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Performance

Annual energy consumption: 33.5 kW-h
Sound power level: 79 dB
Input power (IEC): 750 W
Airflow (max): 29,3 l/s
Vacuum (max): 18,9 kPa

Design

Color: Titanium

Filtration

Dust capacity: 4 L
Dust bag type: s-bag Classic Long
Performance

Exhaust filter: EPA10 washable filter
Motor filter: Microfilter
EPA AirSeal

Usability

Action radius: 9 m
Cord length: 6 m
Power control: Electronic on appliance
Tube type: Metal 2-piece telescopic tube
Tube coupling: Conical
Wheel type: Rubber
Carrying handle: Front
Dust full indicator

Nozzles and accessories

Standard nozzle: TriActive+ nozzle
Accessories included: Crevice tool, Small nozzle
Additional nozzle: Hard floor nozzle

Sustainability

Packaging: > 90% recycled materials
User manual: 100% recycled paper

Weight and dimensions

Weight of product: 5.2 kg
Dimensions of product (LxWxH): 447 x 304 x 234 mm

