

PHILIPS

Bagless vacuum
cleaner

3000 series

1900 W

PowerCyclone 5

Allergy H13 filter



FC9351/61



Higher suction power* with PowerCyclone 5 Compact, yet powerful

With the Philips Bagless Vacuum 3000 Series, compact design meets king-size performance. Enjoy thorough cleaning throughout your home thanks to PowerCyclone 5 technology and our MultiClean nozzle.

Superior performance

- 1900W durable motor for high suction power
- PowerCyclone 5 maintains high performance for longer
- MultiClean nozzle for thorough cleaning on all floors
- Allergy H13 filter system captures >99.9% of fine dust


Effortless cleaning

- Dust container designed for hygienic emptying with one hand
- Compact and lightweight for easy carrying
- Soft brush integrated into handle, always ready to use
- ActiveLock couplings easily adjust to every task




Highlights

1900W durable motor

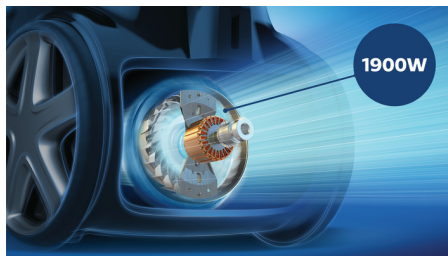

Durable 1900W motor generates up to 370W of high suction power for thorough cleaning results.

PowerCyclone 5 technology

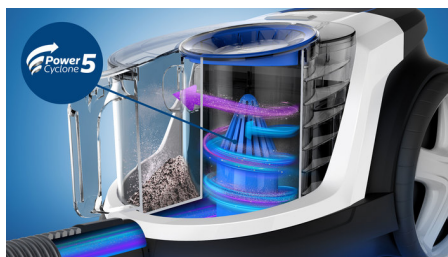

PowerCyclone 5 technology accelerates the air flow in the cylindrical chamber to separate dust from the air and maintain high performance and strong suction power for longer.

MultiClean nozzle



MultiClean nozzle is designed to seal closely to the floor to ensure thorough cleaning across all floor types.

Hygienic dust disposal




Easy-to-empty dust container is designed for hygienic disposal with one hand, to help minimize dust cloud.

Compact and lightweight



Compact and lightweight design ensure both storing and carrying the vacuum is easy.

Integrated brush

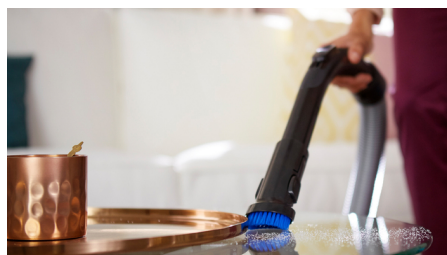

Dusting brush tool is built into the handle so it's always ready to use on furniture, flat surfaces and upholstery.

Allergy H13 filter



The fully-sealed filtration system captures >99.9% of fine dust particles - including pollen, pet hair and dust mites - for allergy

sufferers and anyone demanding a higher level of hygiene. Filtration level is equivalent to HEPA 13**.

ActiveLock couplings



ActiveLock couplings allow attachments to easily fit to the telescopic tube with a simple snap.



IF GOLD DESIGN AWARD 2018

IF award-winning products and projects, concepts and more, selected by the top names in design. For 65 years, the iF DESIGN AWARD has been recognized as an arbiter of quality for exceptional design. The iF label is renowned worldwide for outstanding design services, and the iF DESIGN AWARD is one of the most important design prizes in the world.

Specifications

Performance

Airflow (max): 37 l/s
Input power (IEC): 1600 W
Input power (max): 1900 W
Sound power level: 82 dB
Suction power (max): 370 W
Vacuum (max): 33 kPa

Usability

Action radius: 9 m
Carrying handle: Front
Cord length: 6 m
Tube type: Metal 2-piece telescopic tube
Wheel type: Rubber
Tube coupling: ActiveLock

Design

Color: Monza Red

Filtration

Dust capacity: 1.5 L
Exhaust filter: Allergy H13 filter
Motor filter: Washable filter
Filtration level: HEPA13 level**

Nozzles and accessories

Accessories included: Crevice tool, Integrated brush
Accessory storage: On tubeclip
Standard nozzle: MultiClean nozzle

Sustainability

Packaging: > 90% recycled materials
User manual: 100% recycled paper

Weight and dimensions

Dimensions of product (LxWxH): 410 x 281 x 247 mm
Weight of product: 4.5 kg
Dimensions of packaging (LxWxH): 525 x 320 x 315 mm

Accessories

Filter replacement kit: FC8010/02

