

PHILIPS

Electric sweeper

FC6125/01



Hassle-free cleaning

The quicker way to sweep

Rechargeable, compact, lightweight sweeper with electric rotating brush for quick, in-between, hassle-free floor cleaning. Sweeps all hard floors and short-pile carpets.

Remove dirt effortlessly

- Unique dirt tray removal system

Optimal freedom of movement

- Up to 55 minutes of cordless cleaning power on hard floors

Clean in comfort

- Telescopic handle with soft touch

Easy to grab, use and store

- Cordless, compact and lightweight

Sweeps hard floors and short-pile carpets

- Rotating brush sweeps up the dirt

Highlights

Dirt tray removal system



The unique dust management system gets rid of dirt, from the floor to the bin, effortlessly. One click of a button opens the chamber, allowing you to empty everything inside straight into the bin without bending down or touching any dirt.

Up to 55 minutes of cordless power on hard floors




Enjoy optimal freedom of movement without a cord getting in your way. Powerful, rechargeable batteries give you up to 55 minutes of cleaning on hard floors. If the electric sweeper needs recharging, the battery-low indicator will let you know.

Telescopic handle with soft touch



The telescopic handle extends, allowing you to reach places close at hand or farther away in complete comfort.

Cordless, compact and lightweight

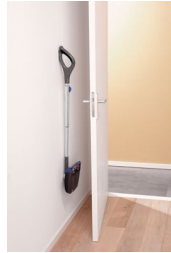

At 1.8 kilograms, the Philips electric sweeper is light enough to just grab and go. Its compact design lets you clean even those hard-to-reach places. The unique design and smart 'hang-eye' feature make the electric sweeper easy to store, even in 'tight' spaces.

Rotating brush sweeps up the dirt



To make your work easier, an electrically rotating brush automatically flips dirt into the electric sweeper's self-contained dirt chamber. Turn on the electric sweeper and effortlessly pick up dirt, crumbs, hair and more. This dynamic brush-roll action is safe and effective on any hard or short-pile carpeted floor in your home.

Convenient charging base



The convenient charging base ensures your electric sweeper is always ready when you are.

Specifications

Design

Color: High gloss olive black

Filtration

Dust capacity: 0.21 l

Nozzles and accessories

Other accessories: Charging base

Performance

Battery voltage: 4.8 V

Charging time: 16-18 hour(s)

Noise level (Lc IEC): 74 dB

Runtime: 55 minute(s)

Usability

Special features: Battery low indication, Charging indication, Dirt tray removal system, Soft touch handle

Tube type: Telescopic tube

Weight and dimensions

Dimensions of A-box (LxWxH): 492 x 376 x 324 mm

Appliances per A-box: 3

Dimensions of packaging (LxWxH): 302 x 155 x 362 mm

Weight of product: 1.8 kg

