

# PHILIPS

Vacuum cleaner  
with bag

PerformerPro

2200W

AirflowMax technology

HEPA 13 filter

Animal+

FC9194/11



## Highest suction power, even as the bag fills up\* with 2200W motor and 5L dust capacity

With its powerful 2200W motor and specially designed dust chamber, Philips PerformerPro maintains high airflow, giving you the highest suction power. For great cleaning results, even as the bag fills up!\*

### Excellent cleaning results

- 2200 Watt motor generating max. 500W suction power
- Revolutionary Airflow Max technology for extreme suction
- 5L dust capacity for longer cleaning
- New 3-in-1 TriActive+ nozzle picks up coarse and fine dust
- Turbo Brush nozzle for more thorough cleaning of your carpet

### Integrated Anti-Allergy system

- HEPA AirSeal with HEPA 13 filter retains 99.99% of dust
- Allergy friendly quality tested by ECARF
- s-bag Ultra Long Performance captures even more fine dust

### Convenience

- Long reach for convenient cleaning
- 360Flex hose swivel for smooth maneuvering
- SmartLock coupling to easily adjust to each cleaning task

# Highlights

## 2200 Watt motor



2200 W motor generates max. 500W suction power for excellent cleaning results.

## Airflow Max technology



Airflow Max technology maximizes the airflow, allowing the dustbag to unfold uniformly, so you get the highest suction power, even as the bag fills-up!

## 5L dust capacity



The specially designed 5L dust chamber allows you to make optimal use of your dust bag, so you can clean for longer.

## TriActive+ nozzle



The TriActive+ nozzle applies 3 cleaning actions in one go: 1) It gently opens the carpet with its specially designed soleplate to remove

the dust deep down. 2) It sucks up big bits with its larger opening at the front. 3) It sweeps up the dust and dirt alongside furniture and walls with its two side brushes.

## Turbo Brush nozzle



The Turbo Brush nozzle allows deep cleaning of carpets, easily removing hair and fluff. The rotating brush inside the nozzle actively removes small dust particles and hairs, resulting in a better cleaning performance on carpets. The wheels of the nozzle prevent damage in case of use on hard floors.

## HEPA AirSeal with HEPA 13



HEPA 13 filter and AirSeal capture even the finest dust before the air is blown out for a dust-free environment and clean, allergen free air. The exhaust air is even cleaner than the air in the room.

## ECARF certified



This vacuum cleaner with HEPA 13 filtration is certified as Allergy friendly by the European Centre for Allergy Research Foundation. The HEPA 13 filter purifies the exhaust air up to


99,95% of allergens from; cat & dog hairs, dust mites or pollen to support an allergy friendly home environment.

## s-bag Ultra Long Performance



The Philips s-bag Ultra Long Performance made of five layers of high quality, non-clogging material captures even the finest dust. This excellent filtration gives you a better cleaning result and clean air in your home. The multilayer filtration also maintains the vacuum cleaners high suction power during the entire lifetime of the bag. The s-bag ULP has been tested and certified by the independent test institute TÜV Rheinland Group, proven to last up to 80% longer than a standard dustbag.

## Long reach

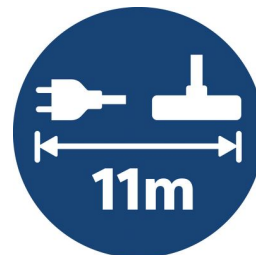

11 m reach allows you to clean a larger surface without having to switch the plug.

## 360Flex hose swivel

The Philips 360Flex hose swivel offers full 360 degrees of rotation of the hose for smooth maneuvering of the vacuum cleaner around your house.

# Specifications

## Design

Color: Cognac

## Performance

Airflow (max): 51 l/s

Input power (IEC): 1800 W

Input power (max): 2200 W

Noise level (Lc IEC): 79 dB

Suction power (max): 500 W

Vacuum (max): 36 kPa

## Filtration

Dust bag type: s-bag Ultra Long Performance

Exhaust filter: Ultra Clean Air HEPA 13 filter

Motor filter: Triple layer

Dust capacity: 5 L

HEPA Air Seal

## Usability

Tube type: Metal 2-piece telescopic tube

Handgrip: Ergonomic grip with air slider

Carrying handle: Top and front

Dust full indicator

Tube coupling: SmartLock

Park or storage assist: Vertical and horizontal

Wheel type: Rubber

Power control: Electronic on appliance

Action radius: 11 m

Cord length: 8 m

## Nozzles and accessories

Standard nozzle: TriActive+ nozzle

Additional nozzle: Turbo brush

Accessories included: Crevice tool, 2-in-1 brush/small nozzle

Accessory storage: On tubeclip

## Weight and dimensions

Weight of product: 5.0 kg

Dimensions of product (LxWxH): 500 x 310 x 300 mm

