

PHILIPS

Steam generator
iron

SpeedCare

Max 4.3 bar pump pressure

160 g steam boost

Carry lock

1.2-l fixed water tank



GC6625/30



Ironing faster with twice as much steam**

The Philips SpeedCare steam generator delivers more steam than a steam iron, helping you to speed up your ironing. Enjoy more quality time with your family thanks to the reduced ironing time with the Philips SpeedCare steam generator iron.

Fast and powerful ironing

- Max 4.3 bar pump pressure
- Tap water-friendly, refill any time during ironing
- Steam boost up to 160 g
- Ready to use in 2 minutes with unlimited refill
- Triple precision tip for optimal control and visibility
- Ceramic soleplate for better gliding performance
- Smart Calc cleaning system with a sound and light cleaning reminder
- 1.2-l water tank and refill at any time during ironing
- Compact size and light weight for easy storage

Highlights

Steam ready in 2 minutes




Steam is ready to use in 2 minutes and can be refilled at any time during ironing.

1.2-l water tank



The SpeedCare steam generator has a 1.2-l water tank capacity to allow you to iron for over an hour. It helps to reduce the number of refills required for large laundry loads. The technology will also allow you refill the water tank during ironing without the appliance cooling down for 2 hours while it is waiting to be refilled.

Triple precision tip

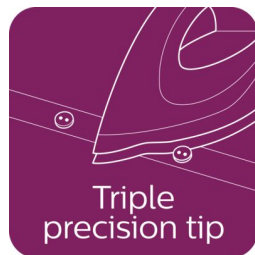

The tip of this Philips iron is precise in 3 ways: it has a pointed tip, button groove and a sleek nose design. The triple precision tip enables you to reach even the most tricky areas, e.g. around the buttons or between the pleats.

Compact size and light weight



Thanks to the revolutionary ProVelocity technology, we made your steam generator iron more compact than ever before. The compact steam generator fits easily on your ironing board making your ironing more convenient. In addition, your steam generator takes much less storage space.

Smart Calc cleaning system



The Smart Calc cleaning system is an integrated descaling and cleaning function that protects your steam generator iron. After around 10 hours of ironing, your steam generator iron will remind you to perform the Calc cleaning process with a sound and light notification. The iron conveniently rests on the Calc container as it collects the dirty water, so you don't have to strain to hold the iron during the process. After all the water has been collected in the container, your steam generator iron is ready to use again.

Refill with tap water any time



Your steam generator iron is designed to use tap water. While ironing, when the water tank runs out of water, you can easily refill it without having to wait or turn off your appliance.

Ceramic soleplate




Ceramic soleplate is scratch-resistant, glides well and is easy to clean.

Max 4.3 bar pump pressure



The more steam, the faster the ironing. Consistent powerful steam is generated which penetrates deep inside the garments making ironing both faster and better. Steam power can be regulated to suit your needs.

Steam boost up to 160 g

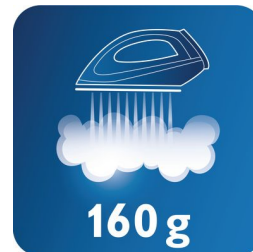

The steam boost can be used for vertical steaming and tough creases.

Specifications

Calc management

Calc clean reminder

Calc clean solution: Smart Calc Clean

Filtered water recommended

Suitable for tap water

Easy to use

Cord freedom (swivel): 180 degree cord freedom

Heat-up time: 2 min

Hose length: 1.6 m

Hose storage: Hose storage compartment

Power cord length: 1.8 m

Refill any time

Storage solution: Carry lock

Water tank capacity: 1200 ml

Filling and emptying water: Extra-large filling hole

Fast and powerful crease removal

Continuous steam output: 100 g/min

Power: 2400 W

Soleplate: Ceramic

Steam boost: 160 g

Vertical steaming

Pressure: Max 4.3 bar pump pressure

Weight and dimensions

Packaging dimensions (W x H x D): 26.4 x 30.3 x 40.4 cm

Product dimensions (W x H x D): 19.8 x 21.7 x 34.6 cm

Weight of iron: 1.1 kg

Weight of iron + base: 2.6 kg

Service

2-year worldwide guarantee

