

PHILIPS

Juicer

Avance Collection

1000 W

QuickClean

2.5 l, XXL tube

Drip stop



HR1871/00



Maximum juice. Minimum fuss.

Make 10% more juice* and clean up within a minute!

This Philips juicer extracts even more juice from your fruit and vegetables. Cleaning has never been easier thanks to the innovative quick-clean sieve and integrated pulp container. Treat yourself with the joy of healthy homemade juice!

Squeeze every drop from your fruit and vegetables

- Make up to 2.5 litres of juice in one go
- No pre-cutting needed thanks to XXL feeding tube
- 2 speeds for soft or hard fruit and vegetables
- Juice the toughest ingredients - 1000 W

Clean within 1 minute!

- QuickClean technology
- QuickClean sieve
- All pulp collected in one place for easy disposal
- Smooth and easy-to-clean surfaces

Easy to use

- Quick and easy assembly of all parts
- Drip stop integrated in the spout

Delicious and easy to make recipes

- Recipe booklet full of inspiring juice recipes



asimpleswitch.com

Highlights

Make 2.5 L in one go



Thanks to the innovative juice extraction system with the upside down sieve, this juicer extracts up to 10% more juice*. And depending on the type of fruit or vegetables you juice, it is possible to make up to 2.5 litres of juice in one go without the need to empty the pulp container.

XXL feeding tube



The 80 mm extra large feeding tube allows you to juice even large fruit and vegetables like apples, carrots and beetroots without pre-cutting.

2 speeds



2 speeds for soft or hard fruit and vegetables

QuickClean technology



The Philips juicer is designed for easy cleaning thanks to QuickClean technology. Cleaning can now be done within 1 minute, thanks to the integrated pulp container and smooth surfaces.

QuickClean sieve



A lot of pulp fibres usually get stuck in the sieve, which makes it very difficult to clean. Thanks to the innovative QuickClean technology, all surfaces of the sieve are smooth, which helps you wipe away the fibres with a standard kitchen sponge.

Integrated pulp container




The pulp will all be collected in the only place where it should be: in the pulp container of your Philips juicer. That means you no longer need to remove pulp from other parts such as the lid. Due to the round design and smooth surfaces without nooks and crannies, the pulp is easy to reach and the container is much easier to clean.

Smooth and easy to clean

The juicer is designed with round shapes and smooth surfaces to facilitate easy rinsing under the tap.

Quick and easy assembly

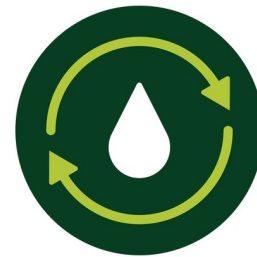

Quick and easy assembly of all parts

Drip stop



Always keep your kitchen counter clean, even when you have finished juicing. The drip stop prevents any juice from dripping onto the table.



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas — Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Accessories

Juice jug
Spout accessory

Design specifications

Material lid: SAN
Material pulp container and pusher: PS
Material spout: Stainless steel
Material jug: SAN jug and PS cover
Colour(s): Ink black and stainless steel
Material housing: Stainless steel

Dimensions

Product weight: 5.2 kg

General specifications

Integrated cord storage
Non-slip feet
Recipe booklet
Safety clamps
Speed setting: 2

Technical specifications

Capacity juice jug: 1500 ml
Cord length: 1 m
Feeding tube dia: 80 mm
Frequency: 50/60 Hz
Power: 1000 W
Pulp container: 1.6 l
Voltage: 220-240 V

Easy to clean

Dishwasher-safe accessories

