

# PHILIPS

## Steam iron

### EasySpeed

Steam 20g/min;90g steam boost

Non-stick soleplate

Anti-calc

2000 Watts

GC1022/40



## Fast, from start to finish

### 3 ways to speed up your ironing

This EasySpeed iron speeds up your ironing thanks to: triple precision tip, even heat distribution across the soleplate and continuous steam.

#### **Easily removes creases**

- Power up to 2000 W enabling constant high steam output
- Steam boost up to 90 g for the most stubborn creases
- Continuous steam up to 25g/min for good crease removal
- American Heritage Black Soleplate

#### **Longer lifetime**

- Calc clean slider to easily remove scale out of your iron

#### **Comfortable ironing**

- Triple precision tip for optimal control and visibility
- Even steam distribution for efficient ironing
- A fine spray evenly moistens the fabric

# Highlights

## Power up to 2000 W



Power up to 2000 W enables constant high steam output.

## Steam boost up to 90 g



The iron's 90 g steam boost enables you to easily remove even the most stubborn creases.

## Continuous steam up to 25g/min



Continuous steam up to 25g/min for good crease removal.

## American Heritage Black soleplate




The soleplate of your Philips iron is coated with a special non-stick layer for good gliding performance on all fabrics.

## Calc clean slider



This steam iron can be operated with normal tap water and the calc clean slider makes it easy to remove any built-up scale out of your iron. To maintain the performance of your Philips steam iron, you should use this scale clean function once a month when using normal tap water.

## Triple precision tip

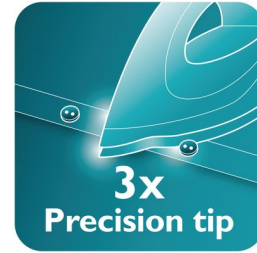

The tip of this Philips iron is precise in 3 ways: it has a pointed tip, button groove and a sleek design of the nose. Triple Precision tip enables you to reach even into the most tricky areas, e.g. around the buttons or between the pleats.

## Even steam distribution

Thanks to the carefully crafted soleplate design, the steam is distributed evenly across the soleplate. This way you need less strokes to evenly moisten the garment and therefore less time to complete the ironing.

## Spray



The spray function produces a fine mist that evenly moistens the fabric, making it easier to iron out creases.

# Specifications

## **Fast & powerful crease removal**

Soleplate: Non-stick

Steam output

Continuous steam output: 25 g/min

Steam boost: 90 g

Spray

Power: 2000 W

## **Easy to use**

Water tank capacity: 200 ml

Reaching tricky areas: Triple precision tip

## **Calc management**

Calc clean solution: Self clean

