

PHILIPS

Saeco

Automatic espresso
machine

Intelial

Classic Milk Frother

Black



HD8751



One touch espresso and coffee

With 100% ceramic grinders

preparing perfect espresso and milk froth specialties just couldn't be easier

Authentic Italian coffee perfection

- Delicious milk froth thanks to the classic milk frother
- Coffee without the wait thanks to the quick heat boiler
- Coffee without burned taste thanks to 100% ceramic grinders

Set the beverages to suit your taste

- Save your favorite coffee length and strength
- Play with the coffee's richness with our adjustable grinders
- Avoid heat loss and fit every cup with our adjustable spout

Ease of cleaning and maintaining

- Always a clean machine thanks to auto-clean and descaling
- Easy cleaning thanks to removable brewing group
- Easy cleaning thanks to dishwasher-safe parts

Highlights

100% ceramic grinders



This espresso machine is equipped 100% ceramic grinders. Saeco uses ceramic grinders because of their consistent grind without overheating the coffee bean for an impeccable espresso. Ceramic also ensures long-lasting performance and a totally silent operation.

Saves coffee length & strength



You will always get a perfect cup of espresso brewed according to your personal preference, thanks to our memo function which allows you to adjust the coffee length and strength to suit your taste. Enjoy a superb coffee drink in your favorite cup with just the press of a button.

5 step adjustable grinders



Different coffee blends require different levels of granularity for the full flavor to unfold. The grind granularity of this espresso machine can be adjusted in 5 settings, from the finest grind, for a full bodied espresso, to the coarsest, for a lighter café crème.

Quick heat boiler




The Saeco quick heat boiler technology ensures your machine is always ready. Now you won't have to wait between brewing each espresso, but can prepare coffee after coffee.

Adjustable spout



The adjustable spout on our espresso machines will fit every cup and thus prevents the coffee splashing or cooling down while pouring in your cup. This way your espresso is always served at the right temperature while maintaining a clean machine.

Removable brewing group

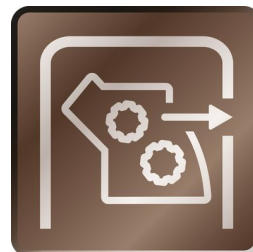

The brewing group, a Saeco invention, is the heart of our espresso machines, ensuring automation. The brewing group is, depending on the model, easily accessible from the front or side. It can be removed effortlessly for easily cleaning by rinsing under the tap ensuring maximum hygiene.

Classic milk frother



This Saeco espresso machine comes with the classic milk frother, which baristas call "Pannarello". It dispenses steam and needs to be immersed in the milk to prepare gorgeous milk foam. Unleash your inner barista by preparing your delicious milk specialties the traditional way!

Dishwasher-safe parts



For your convenience, you can put the Saeco's drip tray and milk frother or milk carafe in the dishwasher. This will save time and ensure a hygienic cleaning.

Specifications

Perfect Espresso

Espresso technology: Saeco adapting system,
Aroma-system: pre-brewing

Easy to use

Cleaning and maintenance: Automatic coffee
circuit rinse, Descaling cycle

Usage: Adjustable coffee dispenser, Cup
holding surface, Rapid steam, Removable
brewing group, Normal / long espresso option

Energy saving

Energy saving: Automatic stand-by

Technical data

Power: 1900 W

Pump Pressure: 15 bar

Weight and dimensions

Product dimensions (L x D x H):
256x340x440 mm

Weight: 8 kg

Coffee bean capacity: 300 gr

Dump box capacity: 10 servings

Features

Hot water / Steam Nozzle

Pannarello: Plastic

Simultaneous brewing

Brita Filter compatible: Optionable

Design

Colour: Black

Materials and finishing: Plastic

Logistic data

Pallet number of pieces: 20

Pallet size: 80x196,4x120 cm

Pallet weight (EU): 190 kg

Technical specifications

Boiler material: Inox

Water tank

Water tank capacity: 1,5 l

