

# PHILIPS

Bagless vacuum cleaner

PowerPro Compact

1700W

PowerCyclone 4

EPA 10 motor filter

FC8471/01



## Higher suction power\* for a better clean

### With PowerCyclone 4 Technology

The new Philips PowerPro Compact vacuum cleaner delivers powerful performance without compromises thanks to the PowerCyclone 4 technology and advanced bucket design

#### **Powerful cleaning performance**

- PowerCyclone 4 technology separates dust and air in one go
- 1700 Watt motor generating 330 Watt suction power

#### **Clean air in your home**

- The EPA filter catches microscopic vermin causing allergy

#### **Ergonomic grip for far reach**

- Reach all corners thanks to the extra long ergonomic grip

#### **Easy to clean**

- Advanced dust container design for easy to emptying

# Highlights

## PowerCyclone 4 Technology




PowerCyclone 4 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber to separate the dust from the air.

## EPA filter system




The pleated EPA filter has a large filter surface and good filtration performance. In combination with the cyclonic airflow, this prevents it from clogging fast and gives you better and longer-lasting filtration results.

## Extra long ergonomic grip

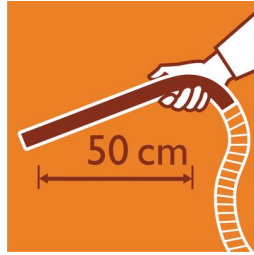

This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

## Easy to empty dust container

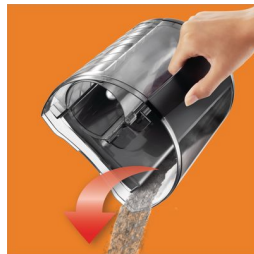

The dust container is perfectly designed to dispose dust without creating a dust cloud. Thanks to its unique shape and smooth surface, dust is collected at one side of the container and evenly glides into the dust bin.

## 1700 Watt motor generating 330 Watt suction power



1700 Watt motor generating 330 Watt suction power

# Specifications

## Design

Color: Star blue

## Performance

Input power (max): 1700 W  
Input power (IEC): 1400 W  
Suction power (max): 330 W  
Vacuum (max): 25 kPa  
Airflow (max): 34 l/s  
Noise level (Lc IEC): 83 dB

## Filtration

Dust capacity: 1.5 L  
Exhaust filter: Microfilter  
Motor filter: Washable foam inlet filter

## Usability

Action radius: 9 m  
Cord length: 6 m  
Tube type: Fixed 2-piece metal tube  
Carrying handle: Front  
Tube coupling: Conical  
Wheel type: Plastic

## Nozzles and accessories

Standard nozzle: All-purpose nozzle  
Accessories included: Crevice tool, Small nozzle

## Sustainability

Packaging: > 90% recycled materials  
User manual: 100% recycled paper

## Weight and dimensions

Weight of product: 4.5 kg  
Dimensions of product (LxWxH):  
406x285x238 mm

