

PHILIPS

Steam generator
iron

PerfectCare
Compact Essential

Max 6 bar pump pressure

Up to 360 g steam boost

1.3 L fixed water tank

Compact design

GC6815/26



Iron faster with 2x more steam*

Guaranteed not to burn*

Powerful, continuous steam works faster than a steam iron – with no temperature or steam settings required thanks to OptimalTEMP technology. Compact and lightweight for easy storage.

No temperature setting needed, guaranteed no burn

- OptimalTEMP technology, no temperature settings required
- No burns – guaranteed

Fast & powerful

- Powerful steam for ultimate crease removal
- SteamGlide soleplate for superior gliding
- Calc-clean container included – no cartridges, no extra cost

Compact & convenient

- Lightweight and compact for easy use and storage
- Large tank for long use

Highlights

Ultra-powerful steam



Strong, continuous steam tackles even the thickest fabrics with ease. Watch stubborn creases melt away with an extra steam boost just where you need it. This extra steam is perfect for vertical steaming to refresh clothes and curtains, too.

No temperature setting needed



Iron everything from jeans to silk without adjusting the temperature. Thanks to OptimalTEMP, no dial or settings are needed. So there's no more pre-sorting the laundry, or waiting for the iron to heat up and cool down. You're ready for any fabric, anytime

No burns – guaranteed



Thanks to OptimalTEMP technology, we guarantee this iron will never cause burns to any ironable fabric. You can even leave it resting face down on your clothes or ironing board. No burns, no shine. Guaranteed.

1.3 L water tank




A 1.3-liter transparent tank gives you more than 1 hour of continuous use. See clearly how much water is left and refill easily at any time under the tap through the large filling door.

Smart descaling



Our built in descaling system, Smart Calc Clean reminds you when you need to descale. It includes a container to make descaling easy. This means no cartridges are required and no additional costs.

Compact and convenient

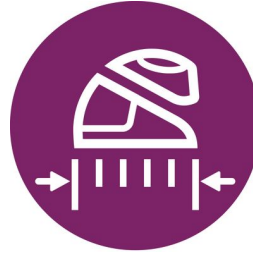

The lightweight, compact size is perfect for storage and fits conveniently on your ironing board. Exclusive ProVelocity technology makes our steam generators smaller and more compact than ever.

SteamGlide soleplate



Our exclusive SteamGlide soleplate moves smoothly over any fabric. A durable, 5-layer coating – including anti-corrosive base – makes it last longer. Non-stick, scratch-resistant and easy to keep clean.

Specifications

Technology

For all ironable fabrics
No burns
No temperature settings needed
ProVelocity steam engine

Fast crease removal

Continuous steam: Up to 120 g/min
Power: 2400 W
Pressure: Max 6 bar pump
Ready to use: 2 min
Steam boost: Up to 360 g
Steam-on-demand
Vertical steam
Voltage: 220-240 V

Easy to use

Safe on all ironable fabrics: Even delicates like silk
Soleplate gliding performance: 4 stars

Soleplate name: SteamGlide
Water tank capacity: 1300 ml
Hose length: 1.6 m
Integrated power plug
Power cord length: 1.65 m
Precision steam tip
Ready to use: Light indicator, Sound indicator
Refill any time during use
Soleplate scratch resistance: 4 stars

Scale management

Descaling and cleaning: Smart Calc Clean
Descaling reminder: Light, Sound, no cartridges needed, no extra

Accessories included

Calc clean container

Storage

Cord storage: Cord storage compartment
Hose storage: Hose storage compartment

Size and weight

Packaging dimensions (WxHxL): 23.5 x 27 x 39.8 cm
Product dimensions (WxHxL): 20.1 x 22.2 x 38.4 cm
Total weight with packaging: 3,7 kg
Weight of iron: 1,3 kg
Weight of iron + base: 2,72 kg

Guarantee

2 year worldwide guarantee

Green efficiency

Product packaging: 100% recyclable

